

avenlur

Playpen 4 by Avenlur



Need Help?

CALL US AT 888.697.3931 / M-F 9AM - 5PM PT (12PM - -8PM ET)
OR EMAIL US AT INFO@AVENLUR.COM

WARNING

Adult assembly required.

WARNING

CHOKING HAZARD:

Adult assembly required. Keep small assembly parts out of reach of children.

 Use under adult supervision.

OBSERVE ALL STATEMENTS AND WARNINGS TO REDUCE THE LIKELIHOOD OF SERIOUS OR FATAL INJURY. SAVE THIS SHEET FOR FUTURE REFERENCE.

OPERATION INSTRUCTIONS

1. An adult should always supervise use of this product by children of all ages.

MAINTENANCE INSTRUCTIONS

1. Inspect the product periodically for loose or damaged components. **Tighten bolts if need.**
2. Check all connections and bolts for tightness at least twice monthly during the usage.
3. Check all coverings and bolts for sharp edges.

INSTALLATION INSTRUCTIONS

Please have an electrical drill available for assembly if possible.

If you have difficulty in installation, please contact us for help and get installation video for reference.

Please Ensure:

1. You are assembling with at least two people to ensure that all sides and parts are leveled.
2. You don't screw the parts in too hard or it will splinter the wood.
3. You follow the directions carefully.

Care, Maintenance, and Storage

Use:

Use with care not to damage any part.

Cleaning:

Wipe wooden panels with a damp cloth. Avoid abrasive cleaners and excessive water to preserve the finish.

Disassembly:

Disconnect the top and bottom connectors.

Stack the panels flat for compact storage.

Storage:

Store the playpen in a cool, dry area to maintain its quality.

CONTACT US BEFORE ASSEMBLY IF:

- You need assistance with assembly
- You need a replacement part due to a missing part or defective part

Call us at 888-697-3931 M-F 9AM-5PM PT

or email us at info@avenlur.com



WARNING

Children have died or been seriously injured when enclosures are not securely installed

- ALWAYS install and use enclosure as directed using all required parts.
- STOP using when a child can climb over or dislodge the enclosure.
- Use only with the locking mechanism securely engaged.
- Never use an enclosure to keep child away from pool.


Failure to follow these warnings and the instructions could result in death or serious injury.

- Prior to use, the product must be fully erected, including side rails.
- Strings can cause strangulation! Never place items with a string around a child's neck such as hood strings or pacifier cords. Never suspend strings over product or attach strings to toys.
- Never place product near a window where cords from blinds or drapes can strangle a child.
- Child can become entrapped and die when improvised netting or covers are placed on top of product. Never add such items to confine child in product.
- When child is able to pull to standing position, remove large toys, mesh liners, and other objects that could serve as steps for climbing out.
- Discontinue use of the product when child is able to climb out or reaches the height of 35 in.(89 cm).
- Always provide the supervision necessary for the continued safety of your child. When used for playing, never leave child unattended.
- Child in play yard must be under supervision at all times.
- Never use this product if there are any loose or missing fasteners, loose joints, broken parts or torn mesh/fabric. Check before assembly and periodically during use. Contact AVENLUR for replacement parts. Never substitute parts.
- Keep hands, fingers, and other body parts clear of interlocking or folding joints during setup and disassembly.
- Use only on flat, level surfaces. Do NOT use at the top of stairs or on uneven ground.


STRANGULATION HAZARD

Children have STRANGLE when their necks became trapped between accessories and play yard frames.


- Remove the accessory anytime the child is in the play yard.

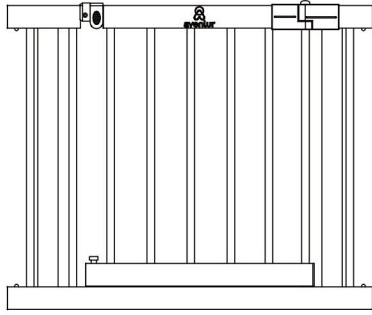


① ×1 28.4in

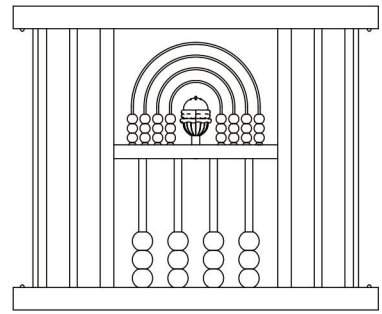


② ×1 28.4in

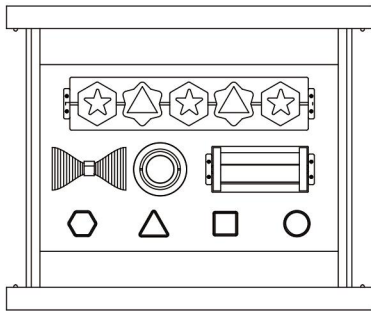


③ ×1 28.4in

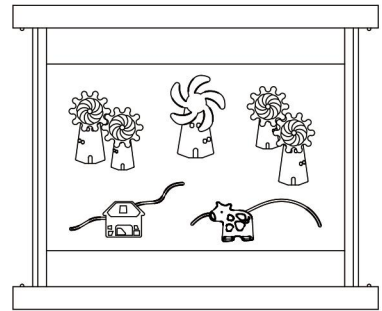

④ ×1 28.4in

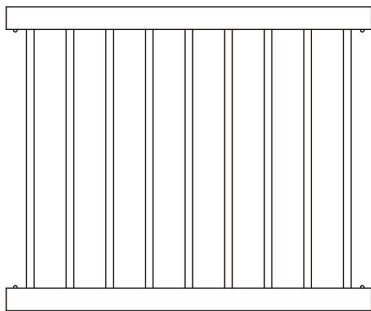

⑤ ×1 28.4in

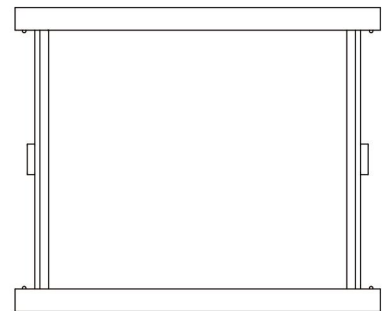

⑥ ×1 28.4in



⑦ ×8 21in



⑧ ×8





⑨ ×8




⑩ ×10

01-1

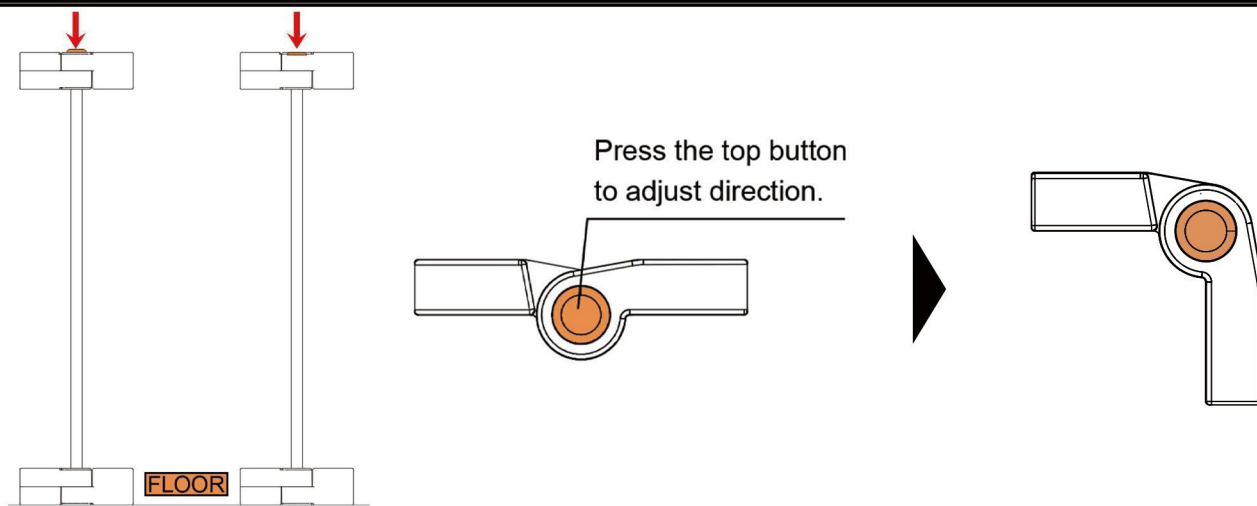
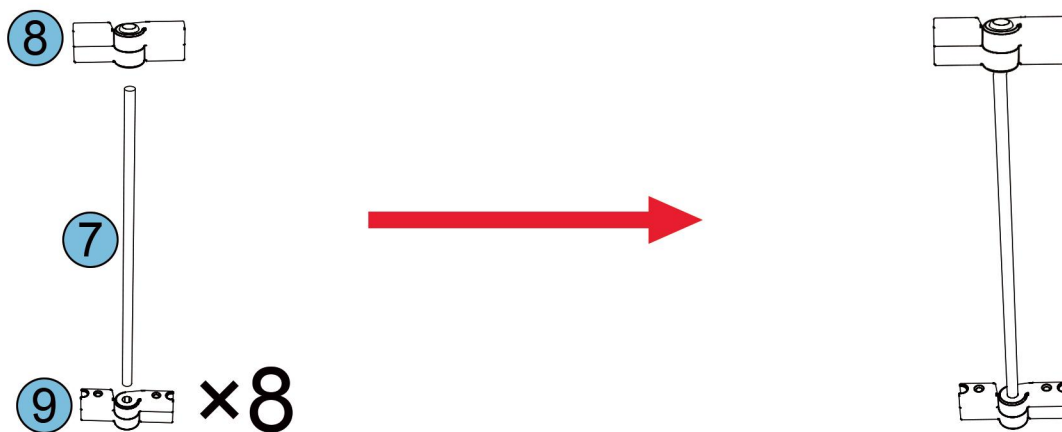


01-2


Twist the locks to open and meantime slightly lift the door upward (the bottom locked pin depth is 0.5in).

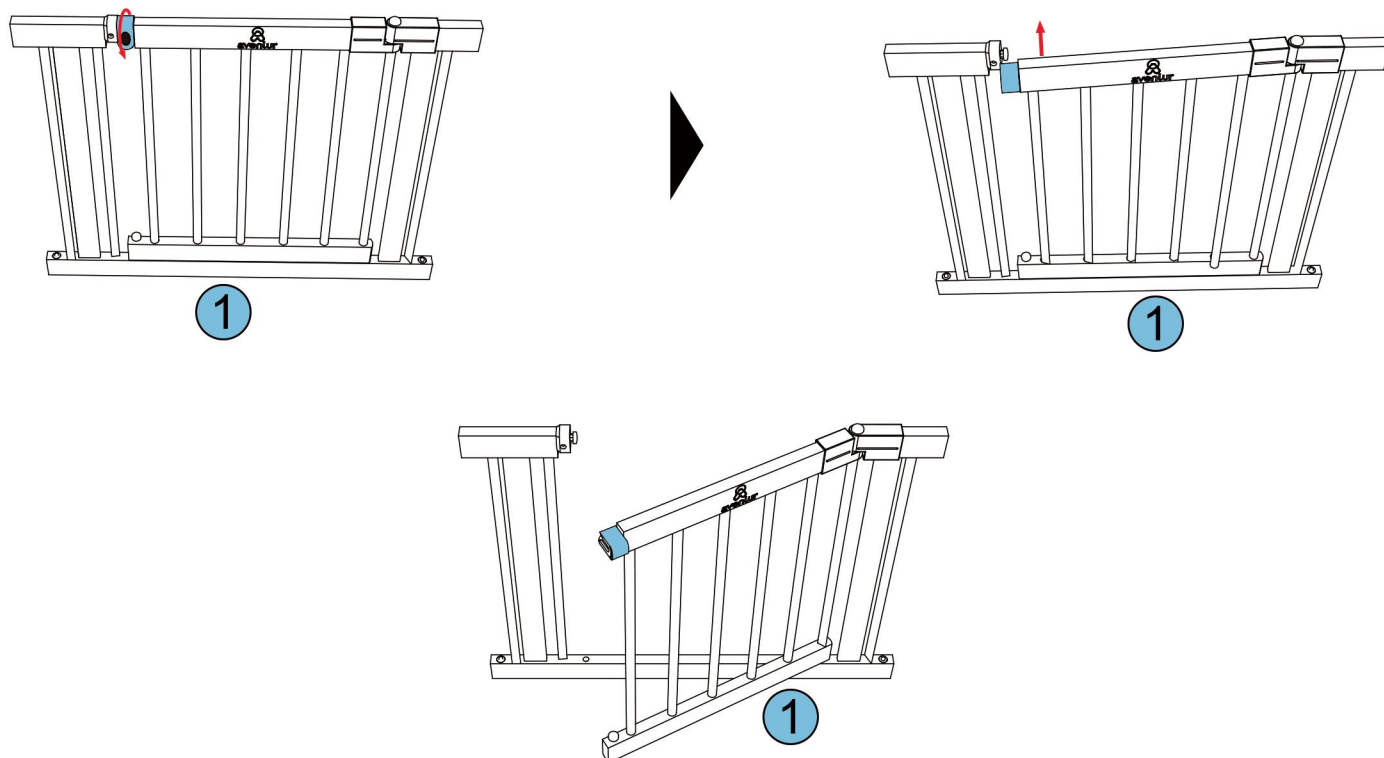



02-1

 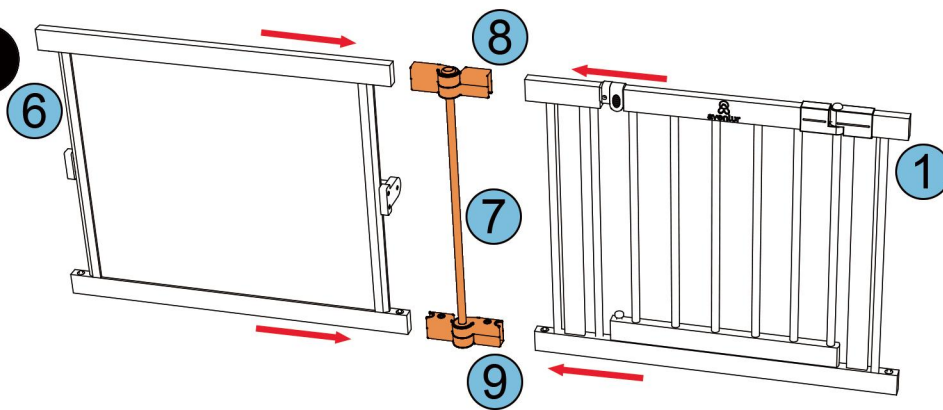


There is a distinction between the front and back of Part 8 and Part 9. Please note that their orientation must be consistent as instruction shows.

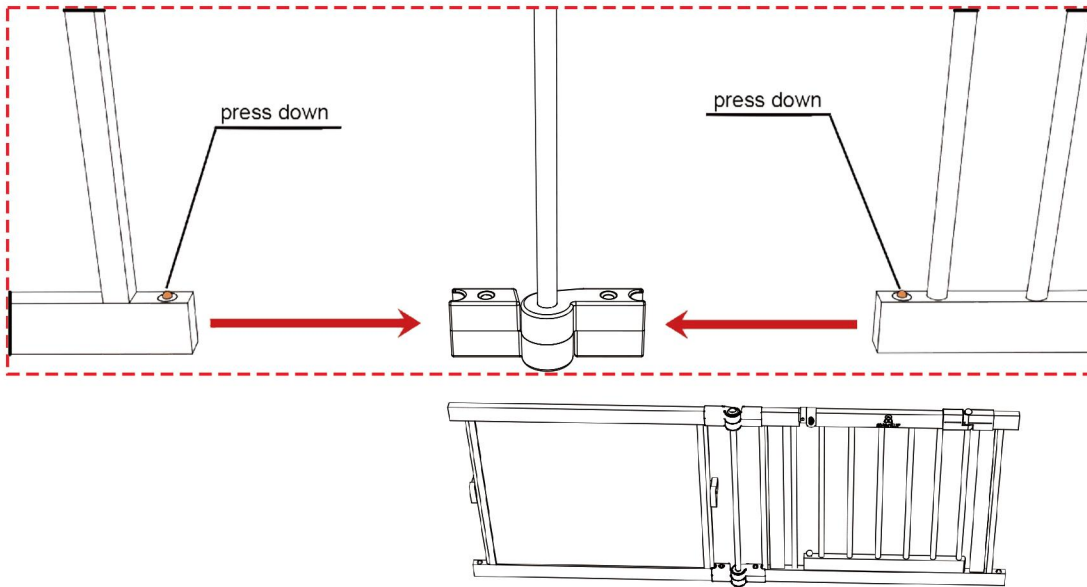


02-2

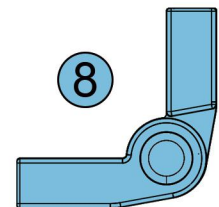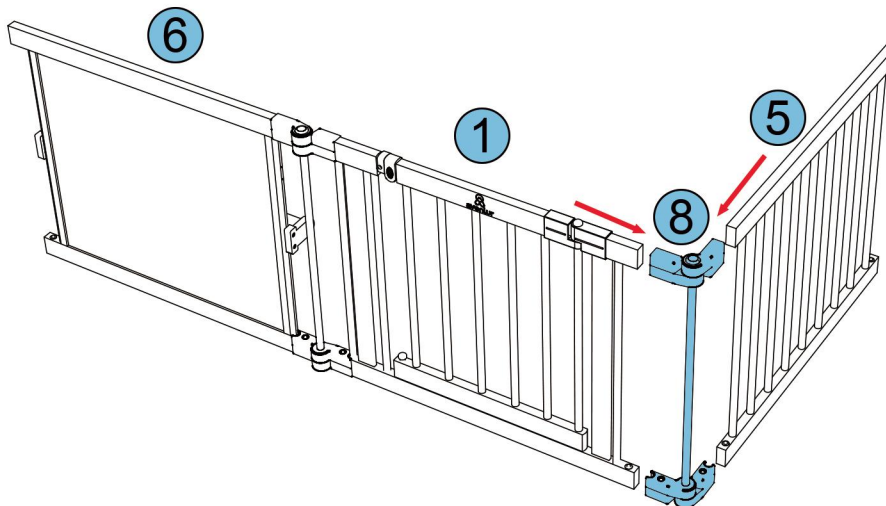

There is a distinction between the front and back of Part 8 and Part 9. Please note that their orientation must be consistent as instruction shows.

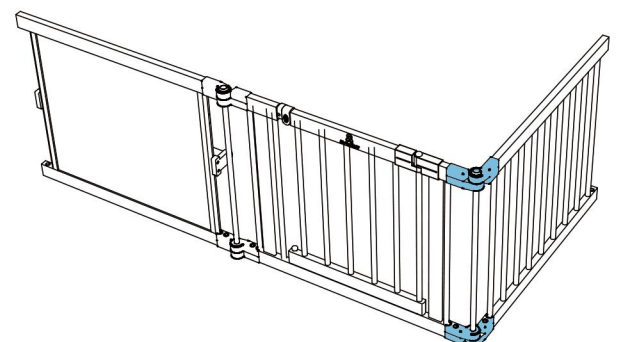


03-1

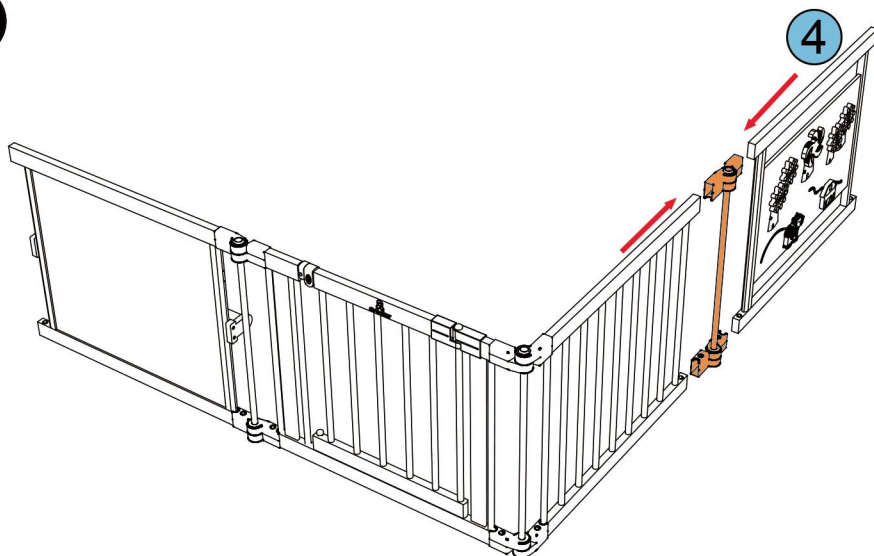



8



There is a distinction between the front and back of Part 8 and Part 9. Please note that their orientation must be consistent as instruction shows.

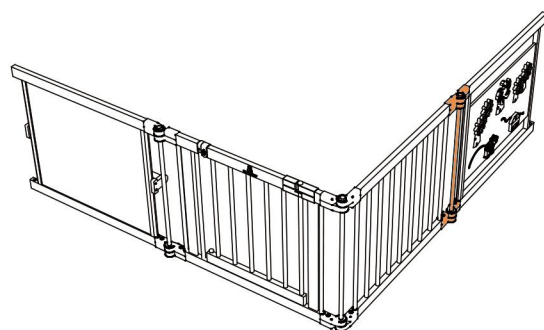


03-2

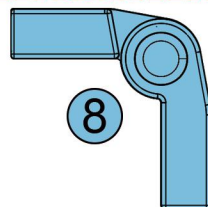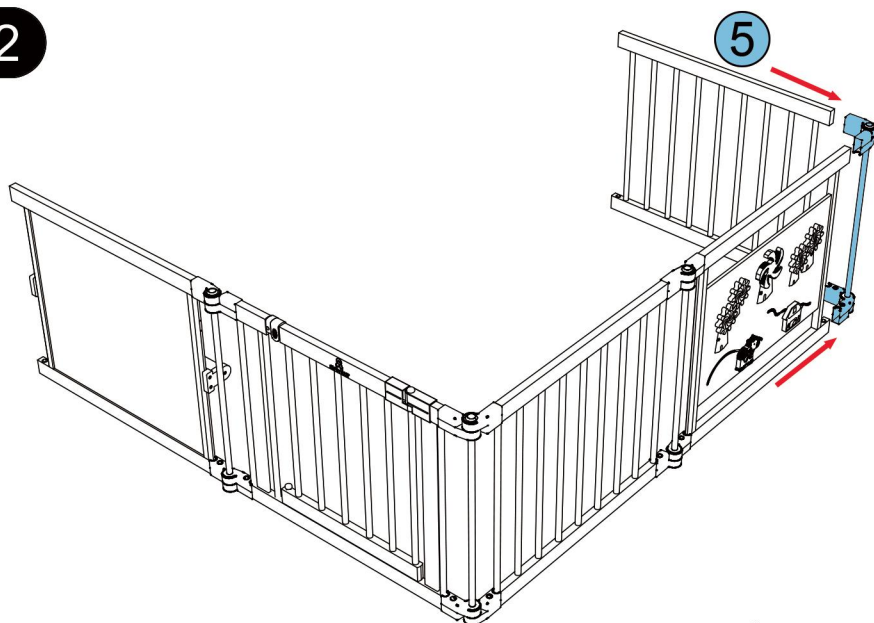


8


There is a distinction between the front and back of Part 8 and Part 9. Please note that their orientation must be consistent as instruction shows.

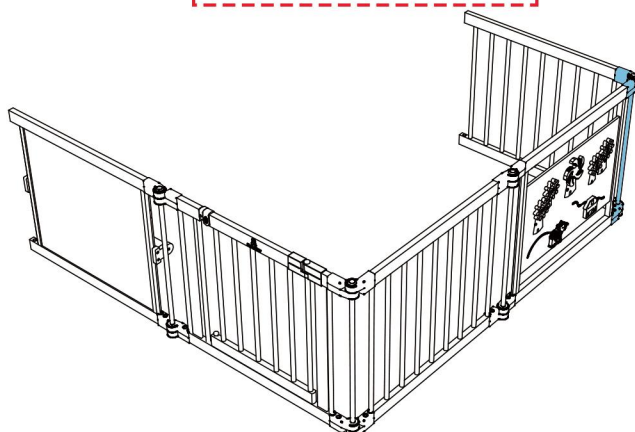


04-1

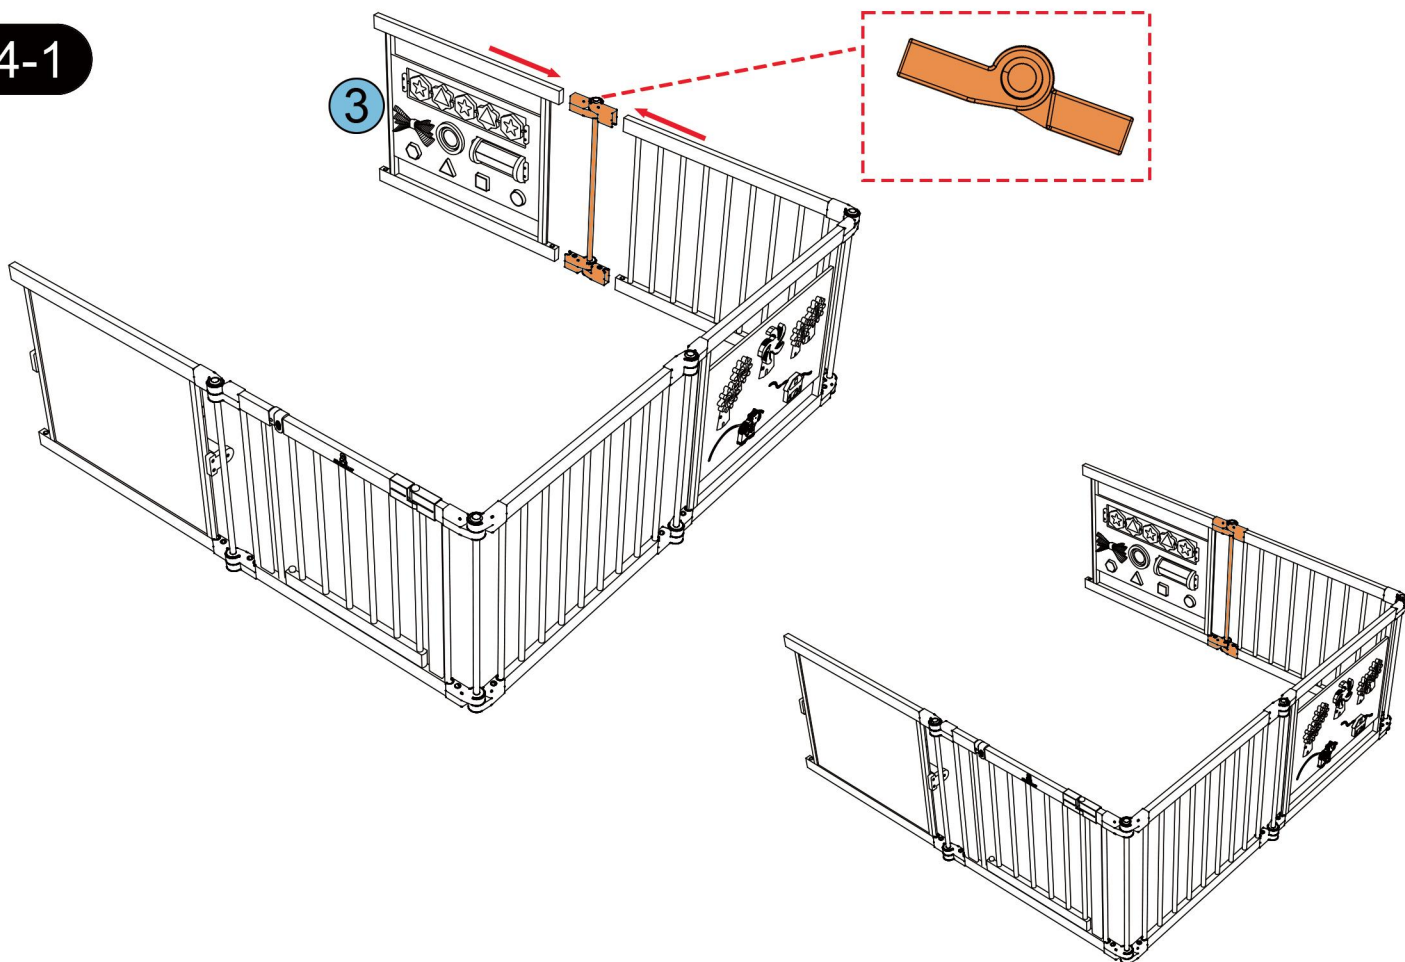


04-2

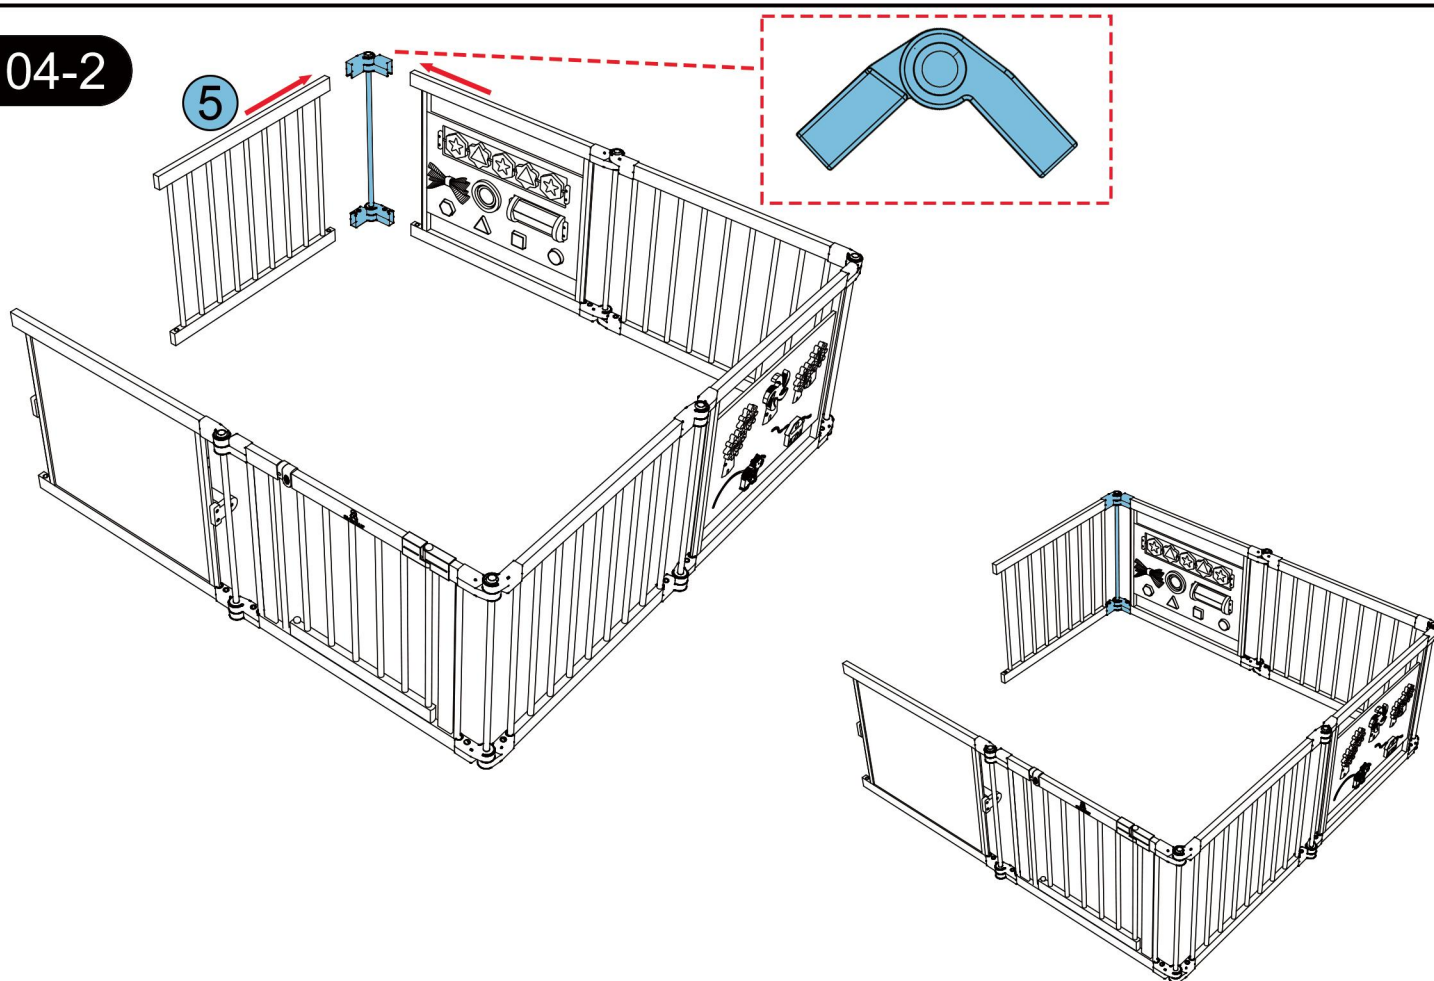

05-1

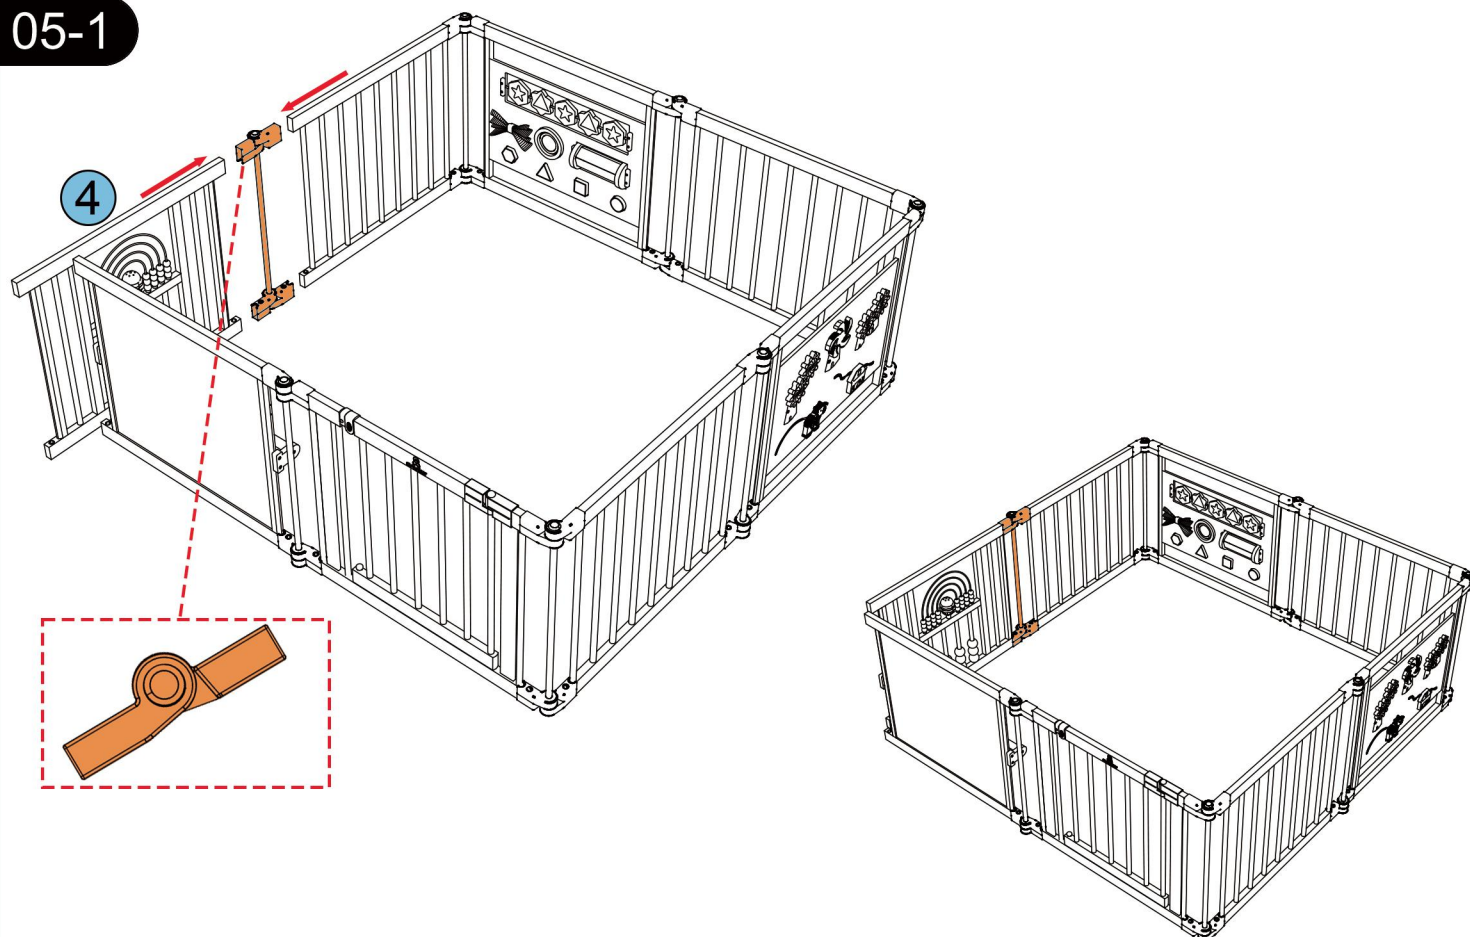


05-2

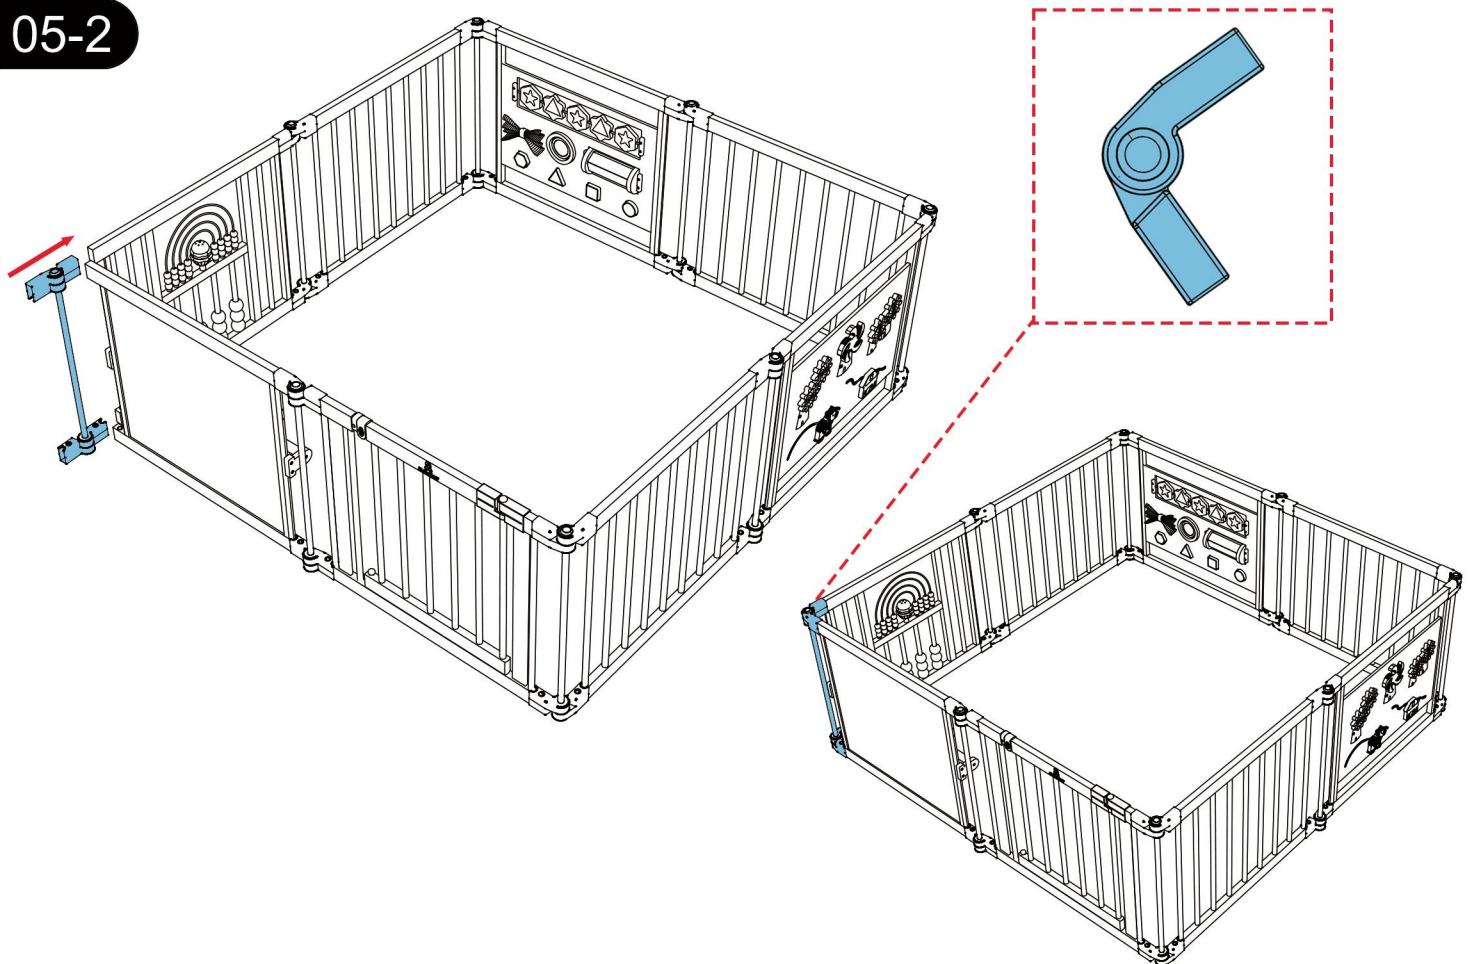

06-1

Steps for Assembling the Rectangle

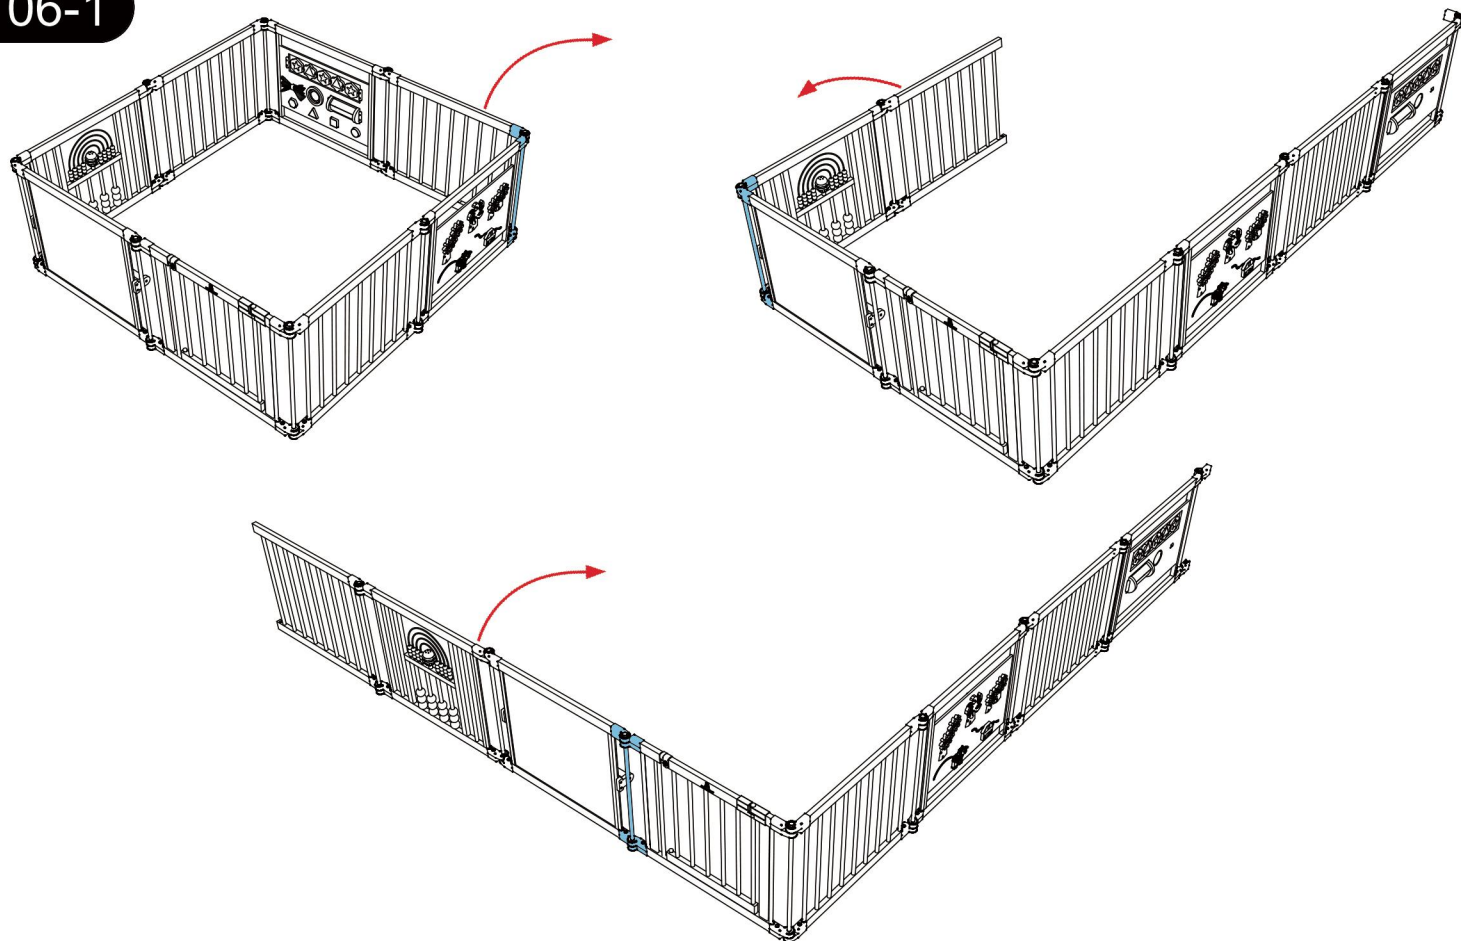

06-2

