

avenlur

Cherry by Avenlur



Need Help?

CALL US AT 888.697.3931 / M-F 9AM - 5PM PT (12PM - -8PM ET)
OR EMAIL US AT INFO@AVENLUR.COM

V2

WARNING

Adult assembly required.

WARNING

Maximum user weight: 110 lbs (50kg) per child.

WARNING

CHOKING HAZARD:

Adult assembly required. Keep small assembly parts out of reach of children.

 Use under adult supervision.

OBSERVE ALL STATEMENTS AND WARNINGS TO REDUCE THE LIKELIHOOD OF SERIOUS OR FATAL INJURY. SAVE THIS SHEET FOR FUTURE REFERENCE.

OPERATION INSTRUCTIONS

1. An adult should always supervise use of this product by children of all ages.
2. Instruct children not to attach items to the playground equipment that are not specifically designed for use with the equipment (examples: ropes, clothesline, pet leashes, cables and chain, etc) as they may cause a strangulation hazard or any other hazard.
3. Never allow children to use the equipment in a manner other than intended.

MAINTENANCE INSTRUCTIONS

1. Inspect the product periodically for loose or damaged components. **Tighten bolts if need.**
2. Check all connections and bolts for tightness at least twice monthly during the usage.
3. Check all coverings and bolts for sharp edges.

INSTALLATION INSTRUCTIONS

Please have an electrical drill available for assembly if possible.

If you have difficulty in installation, please contact us for help and get installation video for reference.

Please Ensure:


1. You are assembling with at least two people to ensure that all sides and parts are leveled.
2. You don't screw the parts in too hard or it will splinter the wood.
3. You follow the directions carefully.

CONTACT US BEFORE ASSEMBLY IF:


- You need assistance with assembly
- You need a replacement part due to a missing part or defective part

Call us at 888-697-3931 M-F 9AM-5PM PT


or email us at info@avenlur.com

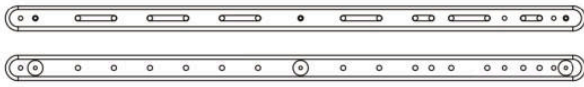


① x1 45in

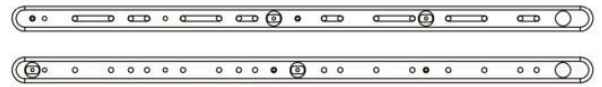


② x1 45in



③ x1 45in



④ x1 45in



⑤ x1 45in



⑥ x1 38in



⑦ x1 38in



⑧ x1 40.8in



⑨ x1 40.8in



⑩ x7 18.1in



⑪ x2 15.5in




⑫ x2 22.3in




⑬ x2 22.3in




⑭ x2 24.2in

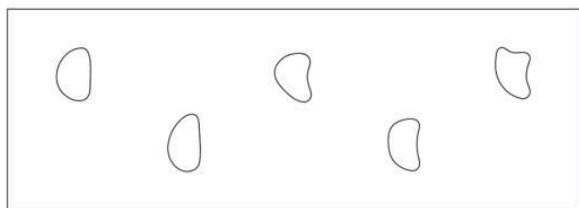

⑮ x1 45in

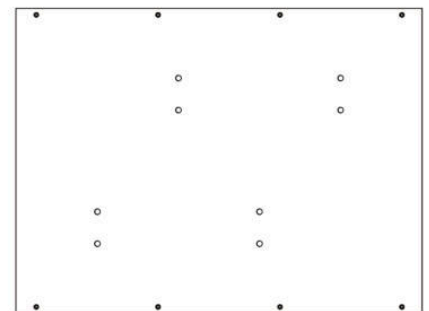


⑯ x1 31.5in




⑰ x1 47in




⑱ x1 47in

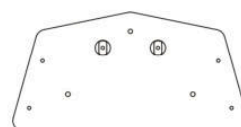


⑲ x1 18in

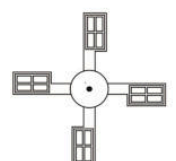


⑳ x1 12in

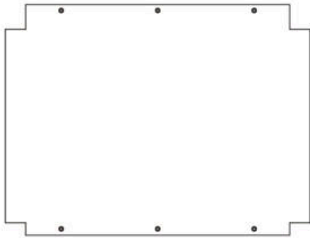


21 x1 23.5in

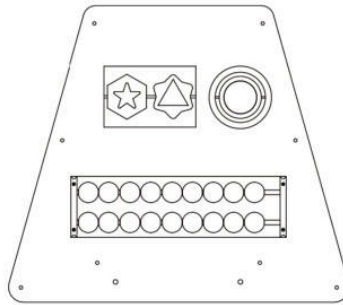


22 x1 26.5in

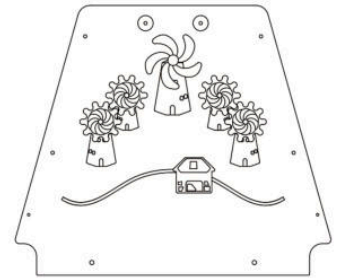

23 x1 24.5in

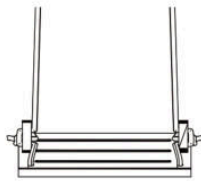

24 x1

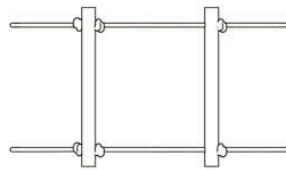

25 x1




26 x4



27 x3 177in



28 x2 94.5in



29 x1 45in



M6.3x40
A x14



M7x50
B x26



M4x25
C x2



M4x40
D x14



M5x30
E x2



M6x30 M6x20
F x18



M6x40 M6x20
G x4



M10x35
H x8



I x1



4mm
J x2




17mm
K x1




8mm
L x1

01-1

Note: Pay attention to all the black bubbled section markers. The manual may refer back to those later.

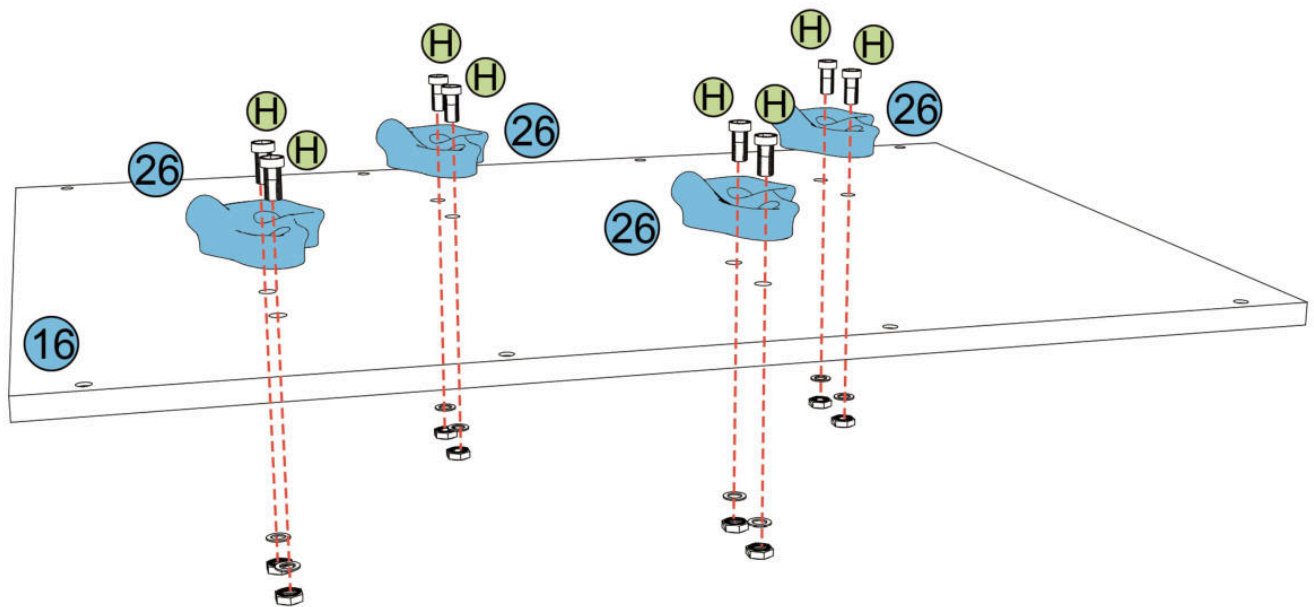



H		8
K		1
L		1

Note: These are locking nuts, and are known for being stubborn. Make sure the rubber part of the nut is facing outward, it takes effort to get past it. WD-40 can help.




01-2

Note: Make sure screw head indent (countersink) of 16 (the board) is facing upward.

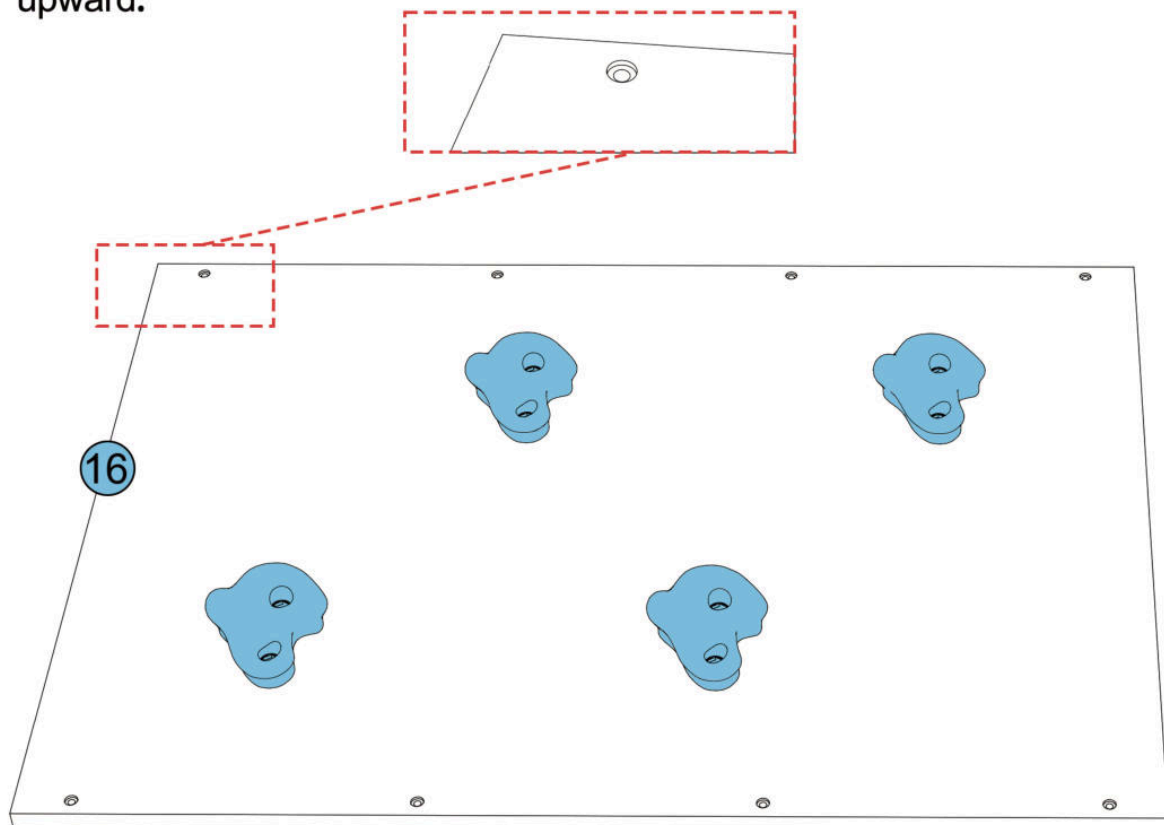


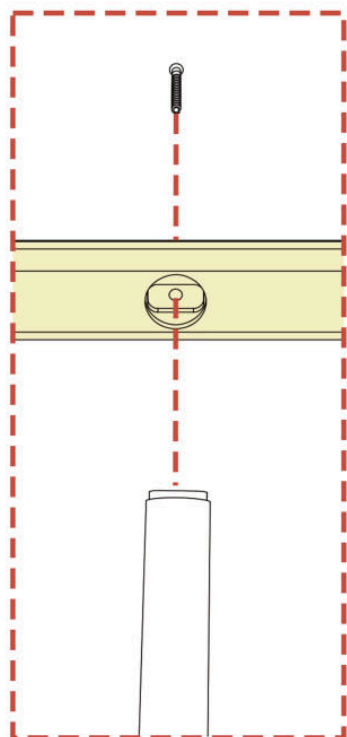



Ensure that the protruding end of part 10 & 13 matches the insert and hole of part 4. Insert and screw in. Repeat for all 7 rungs, before screwing in the 7 rungs on the other side.

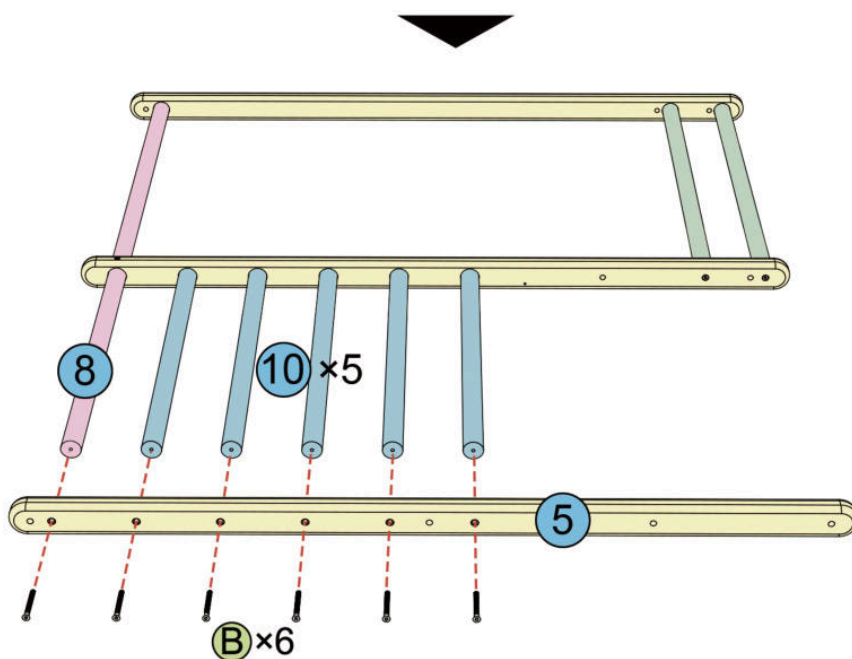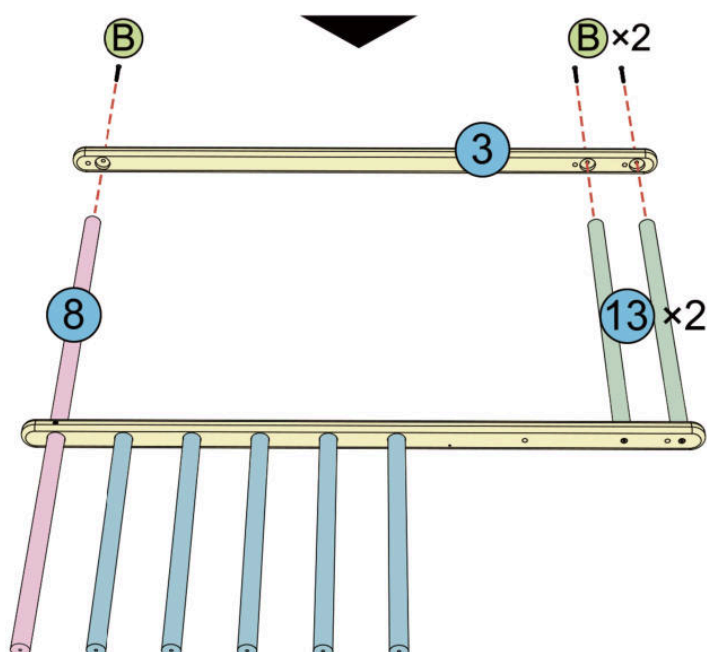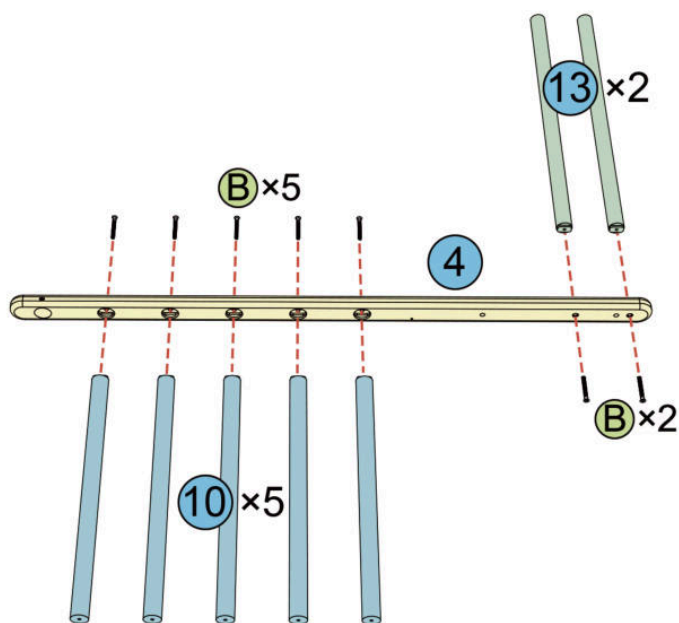


(B)	 M7x50	16
(J)	 4mm	1


Screw in **C** screw, only after
you have already tightened
all the **B** screws.

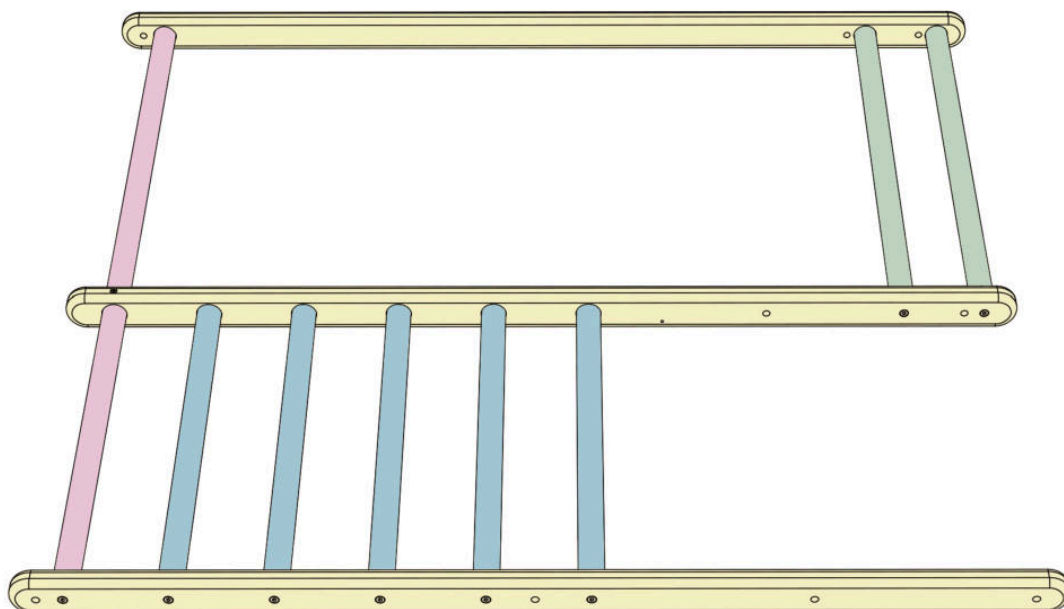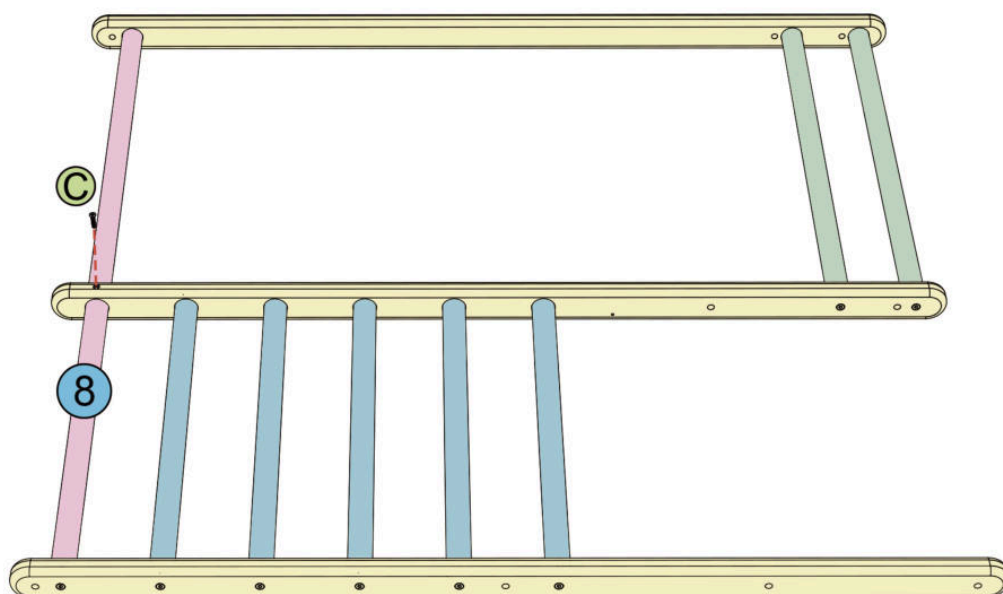


C	 M4x25	1
J	 4mm	1

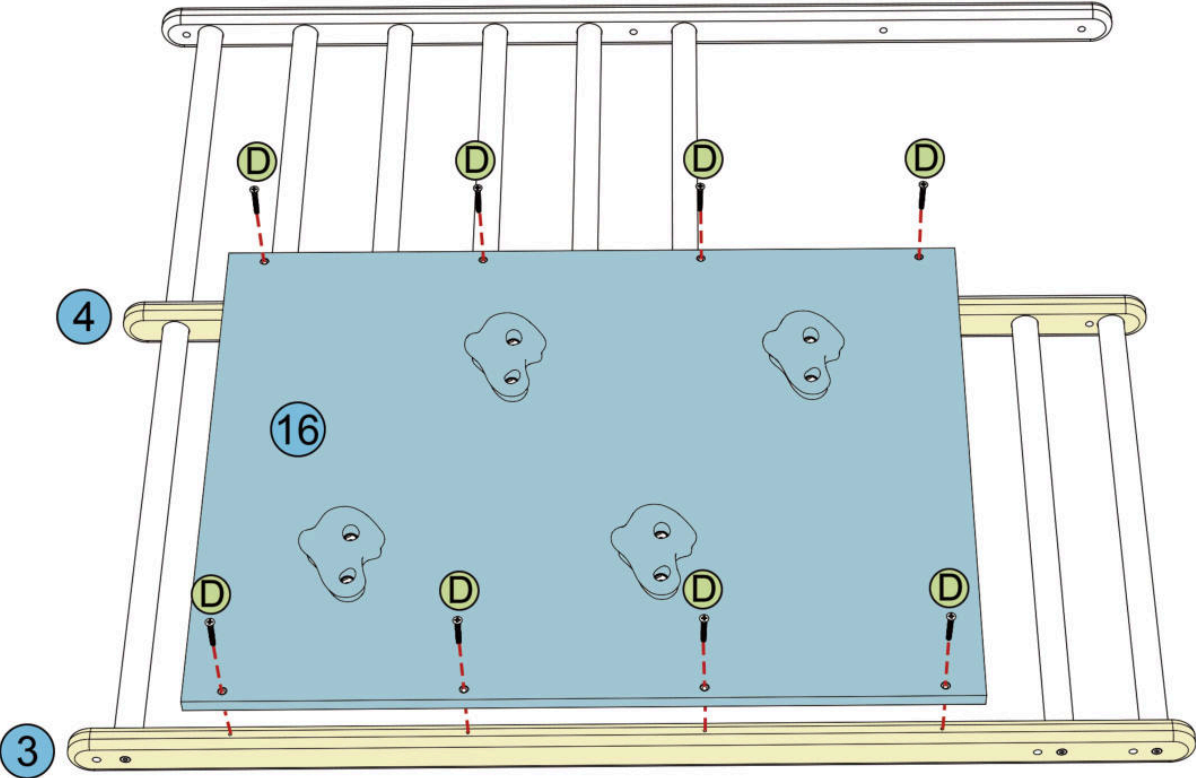


01-2

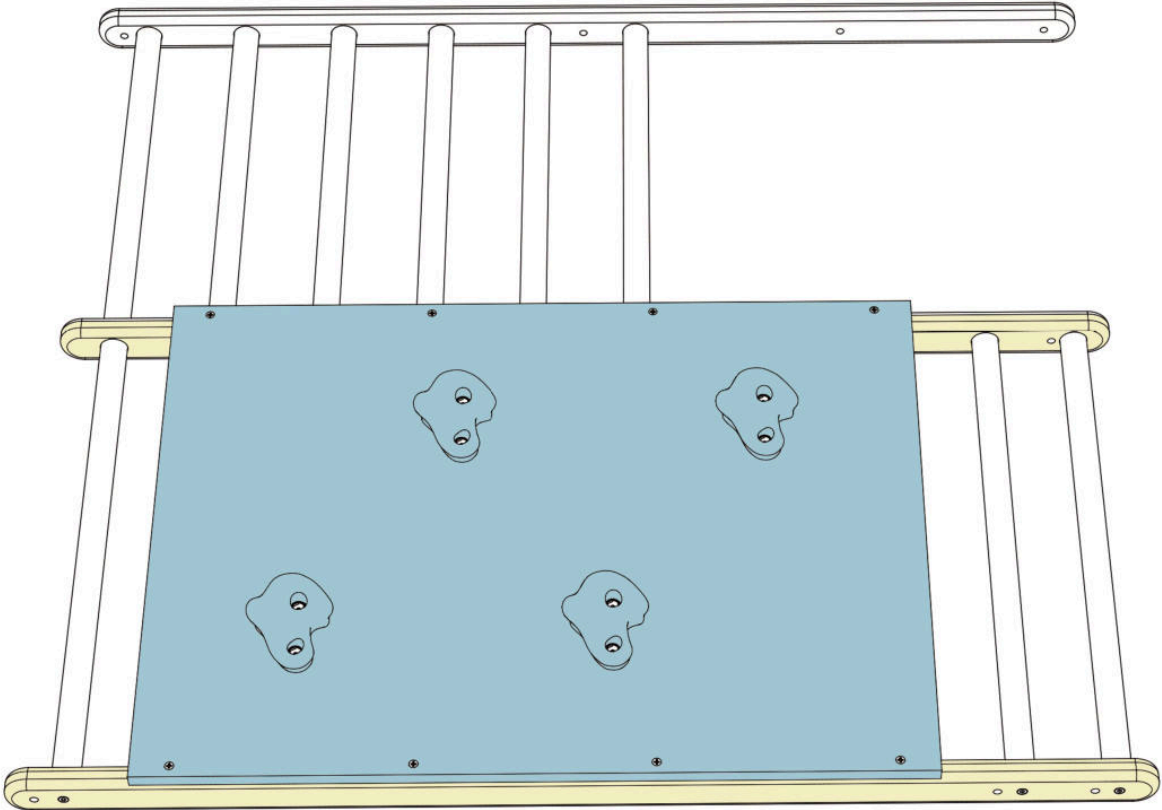


D	 M4x40	8
J	 4mm	1


Ensure that the protruding end of part 10 & 12 matches the insert and hole of part 2. Insert and screw in. Repeat for all 4 rungs, before screwing in the 4 rungs on the other side.

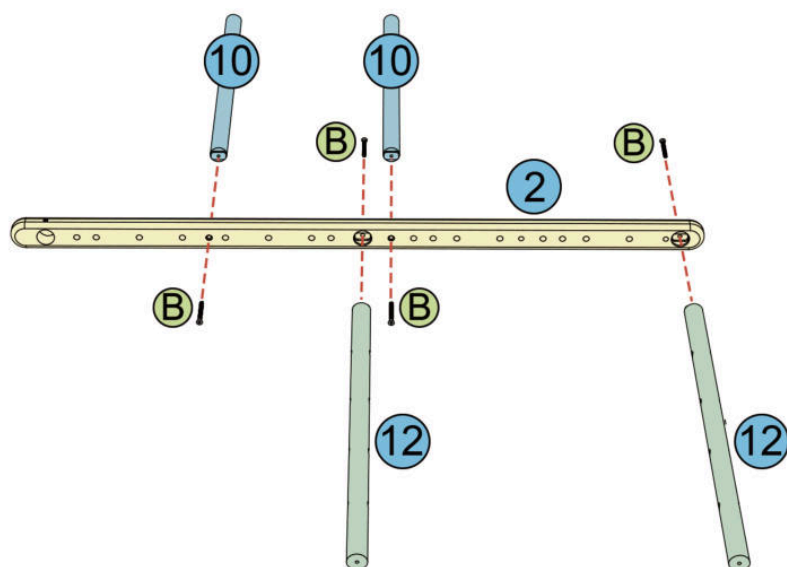


The holes of Part 9 must align with the holes of Part 12 in the same direction.

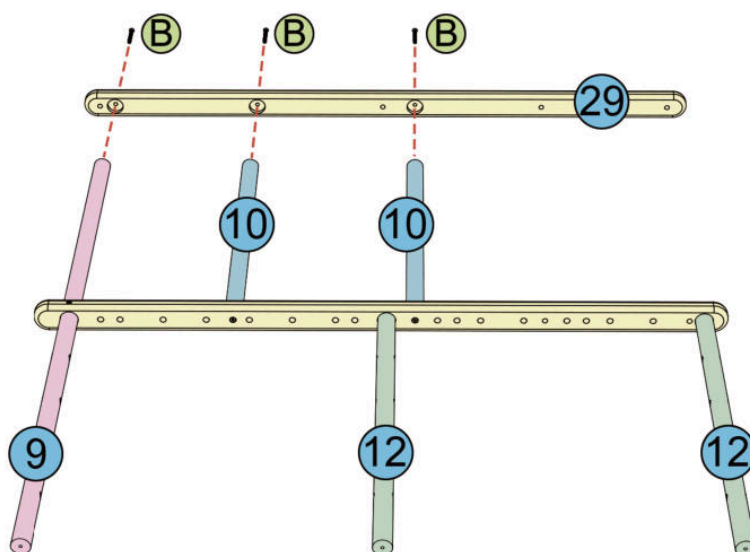


Screw in C screw, only after you have already tightened all the B screws.

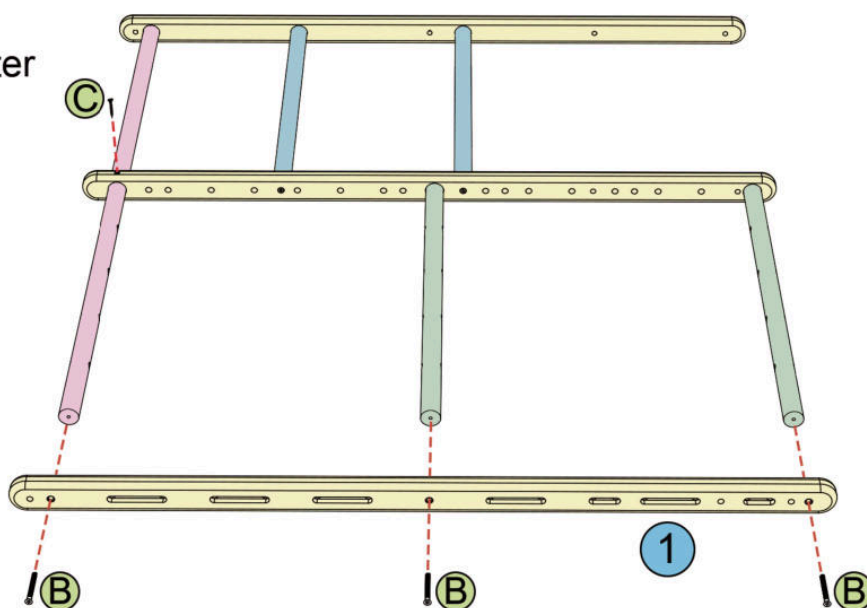





C	 M4x25	1
B	 M7x50	10
J	 4mm	1

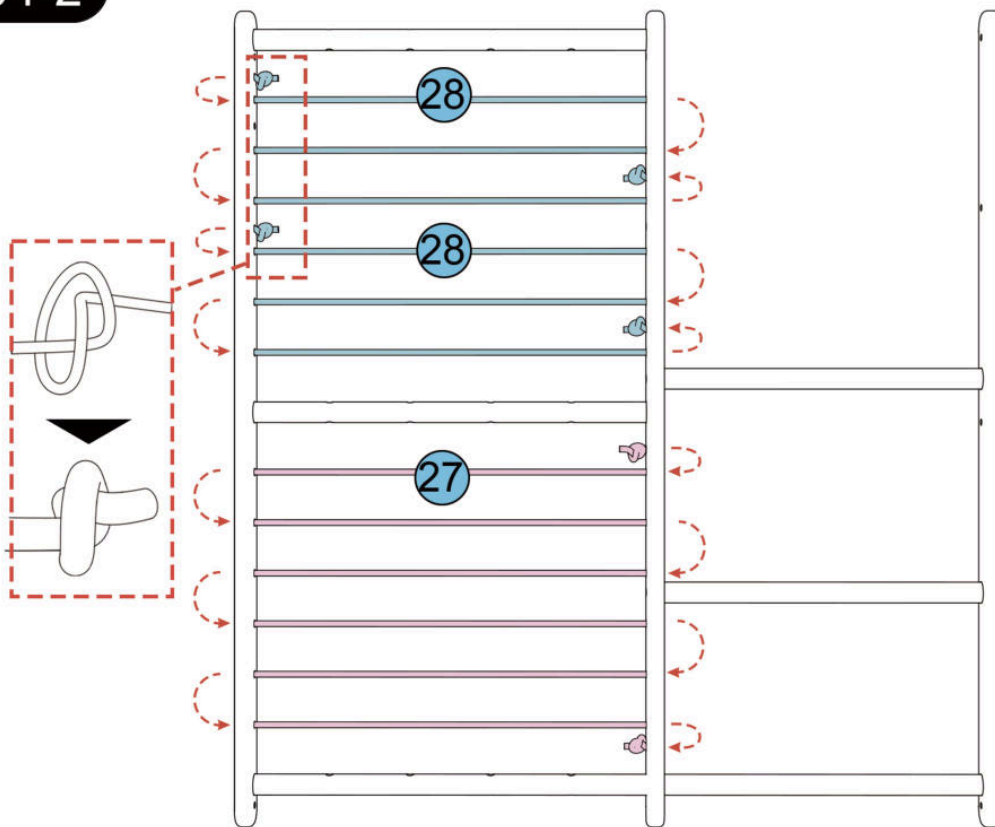


Need help? Scan the
QR code to watch the
instructional video

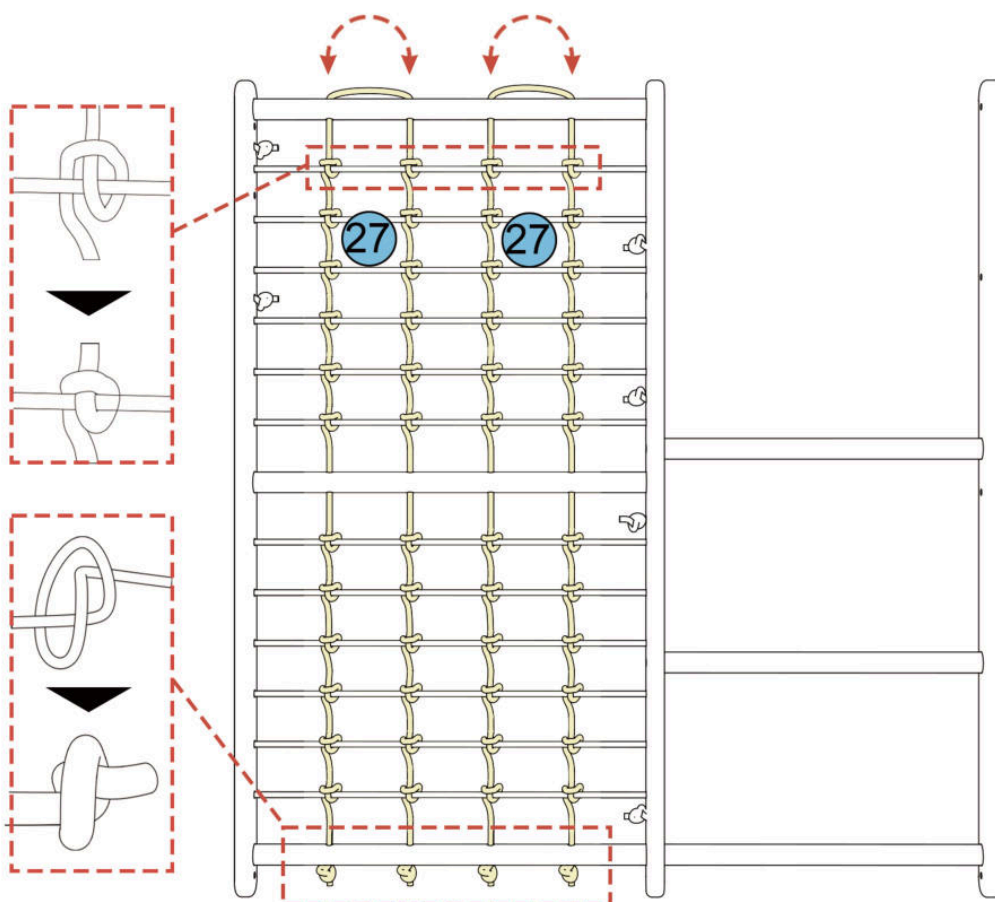

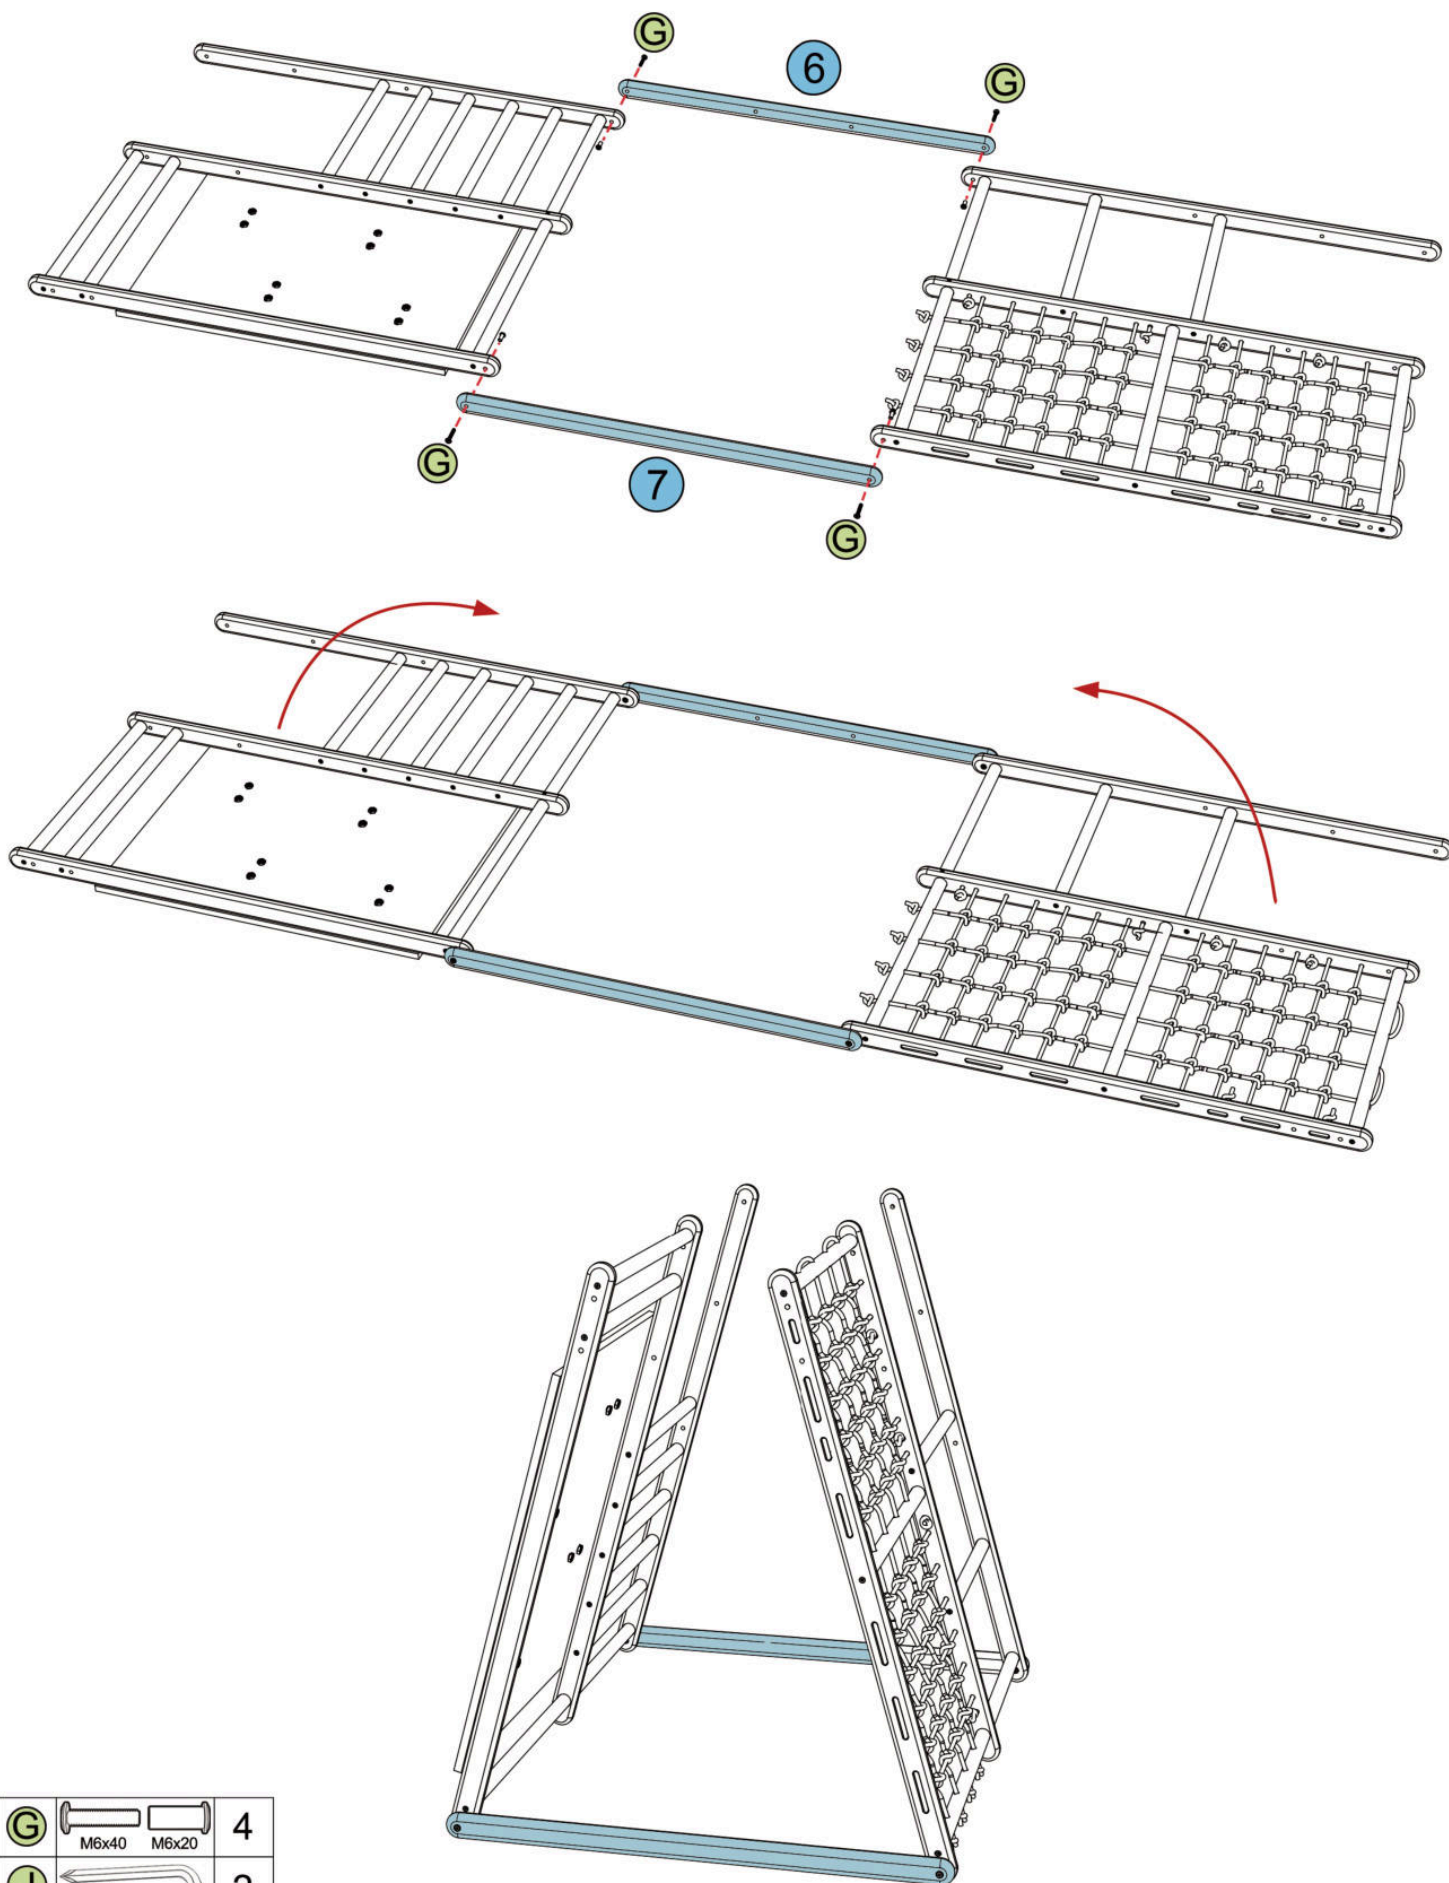


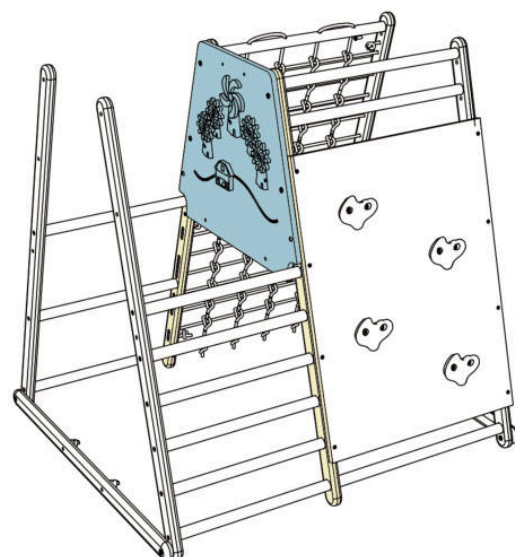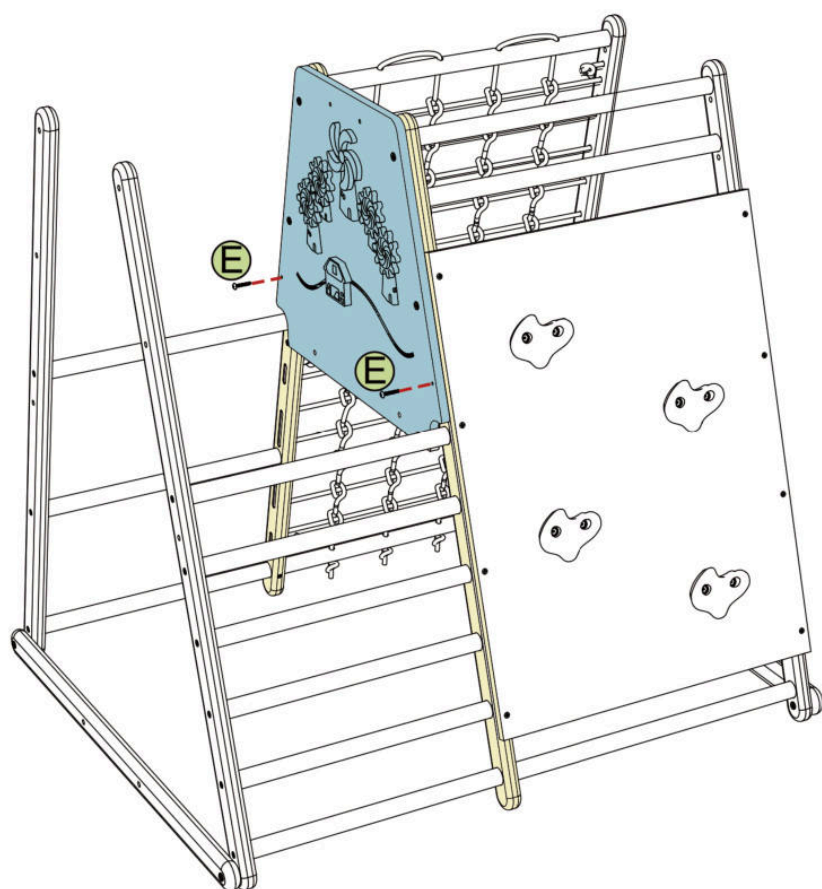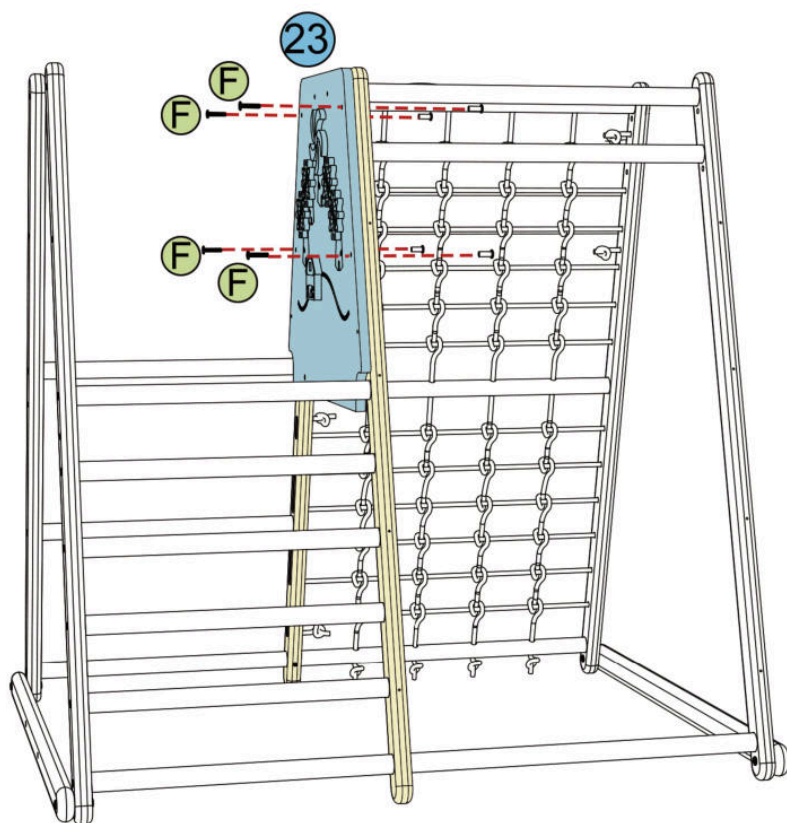


F	 	4
E		2
J		2

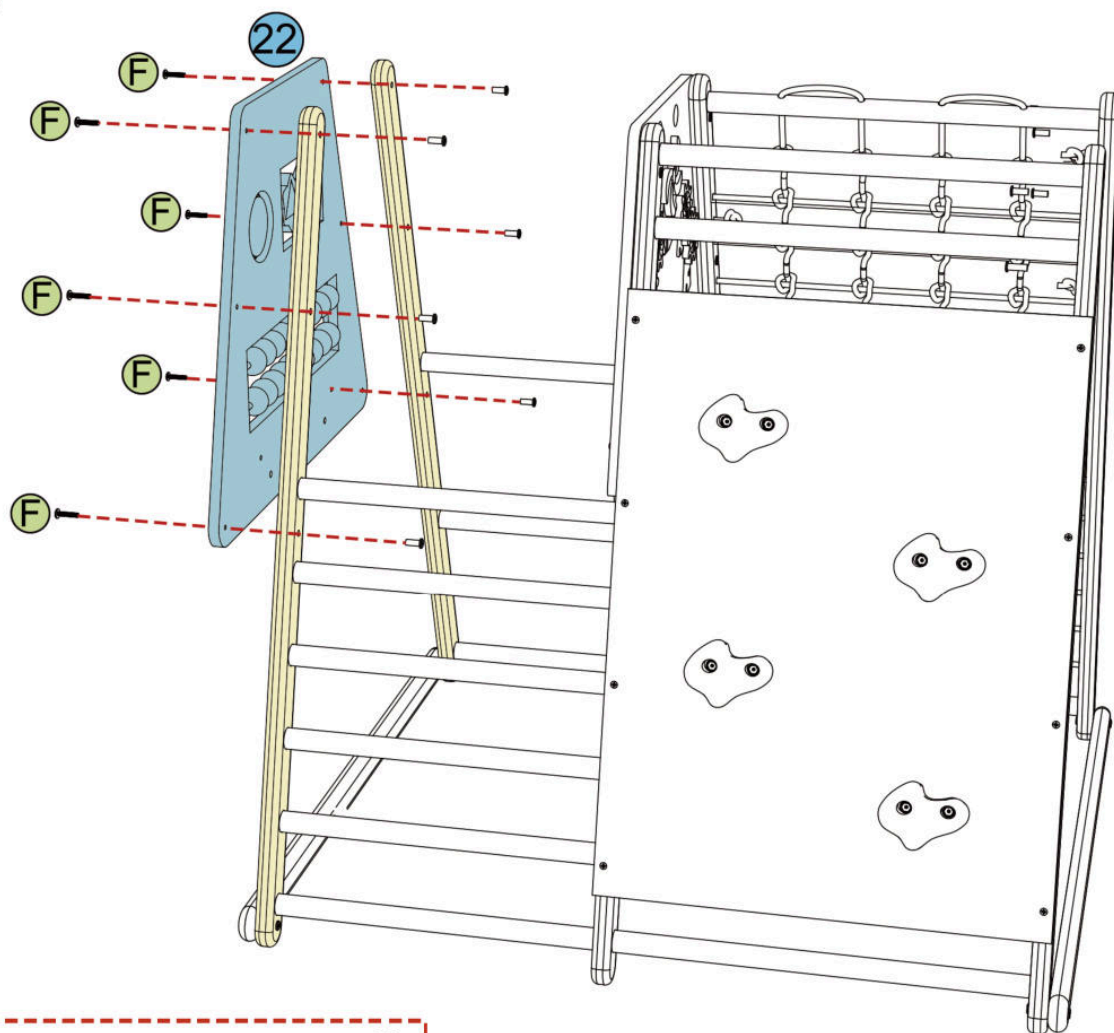



Note: After assembling Part 22, please be sure to peel off the scratch-resistant film on the mirror to prevent children from ingesting it.

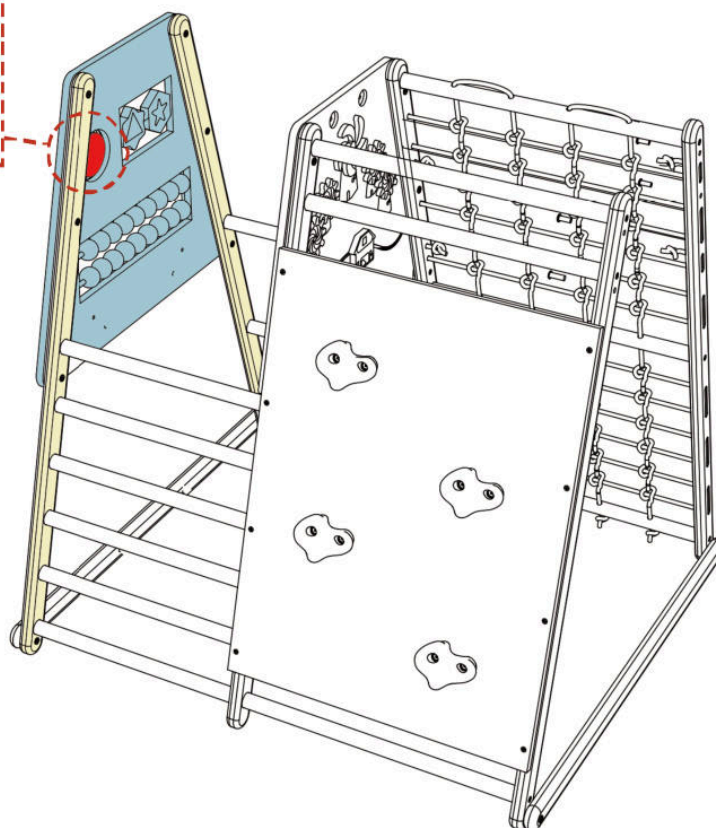

F	 M6x30 M6x20	6
J	 4mm	2

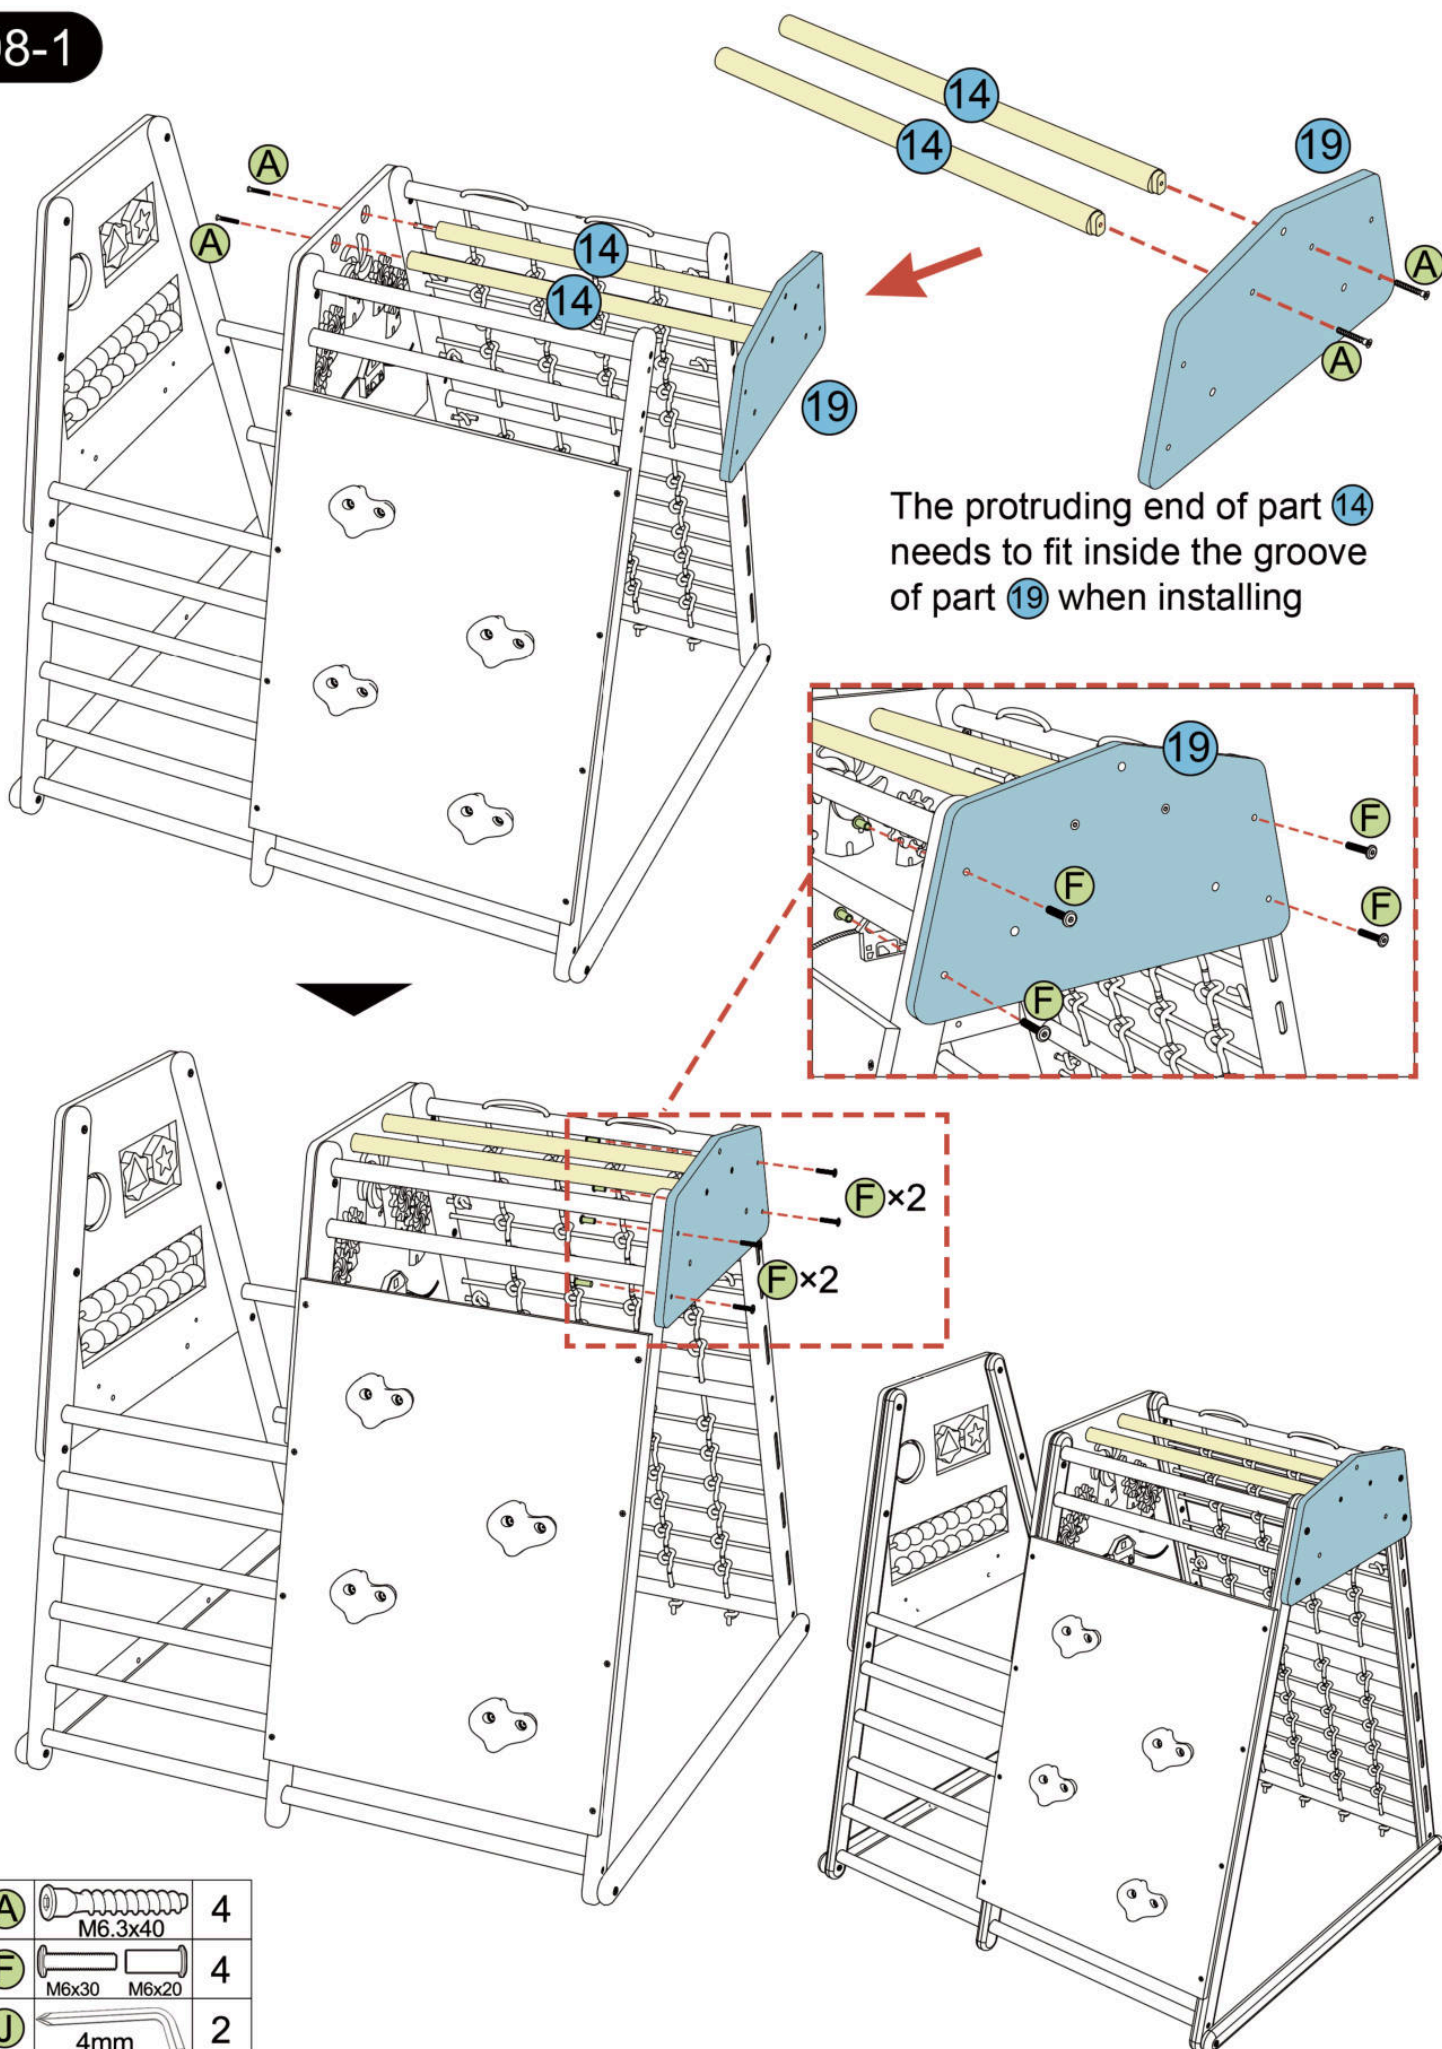



09-1

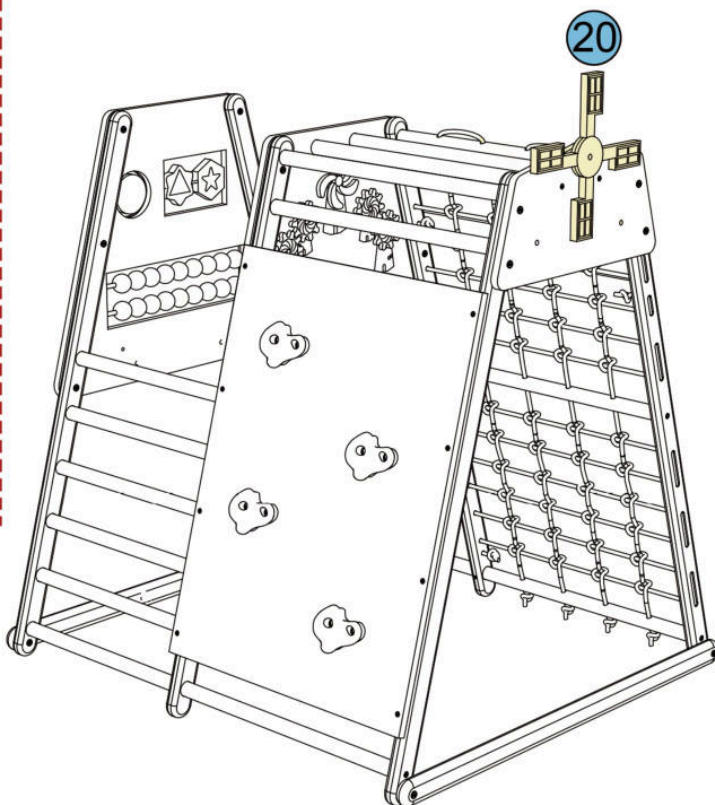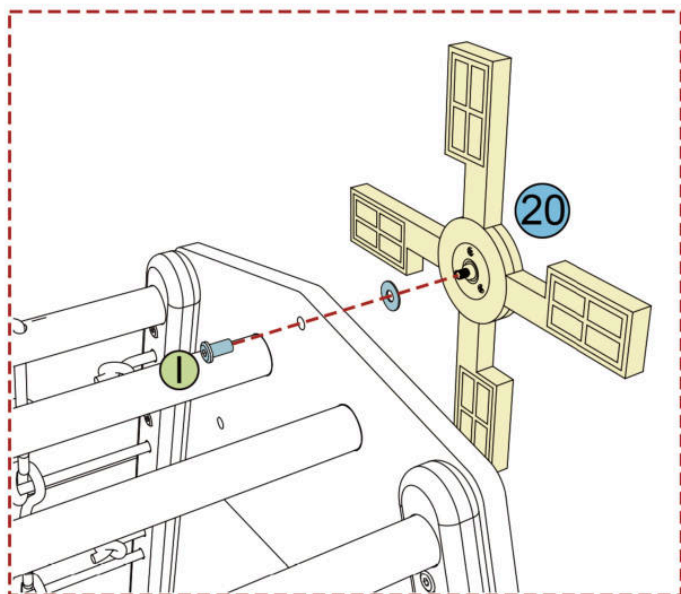




I		1
J	 4mm	2


10-1


Note: Make sure screw head indent (countersink) of 21 (the board) is facing upward

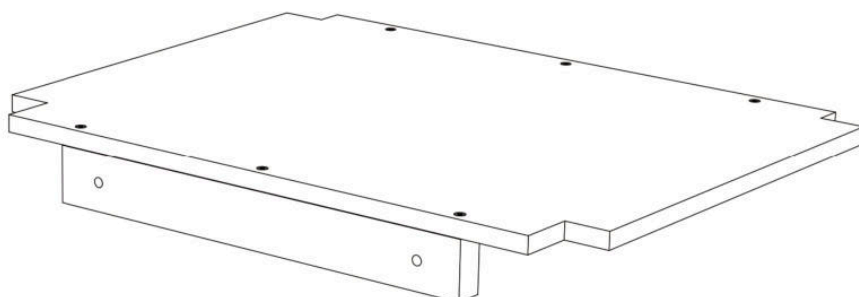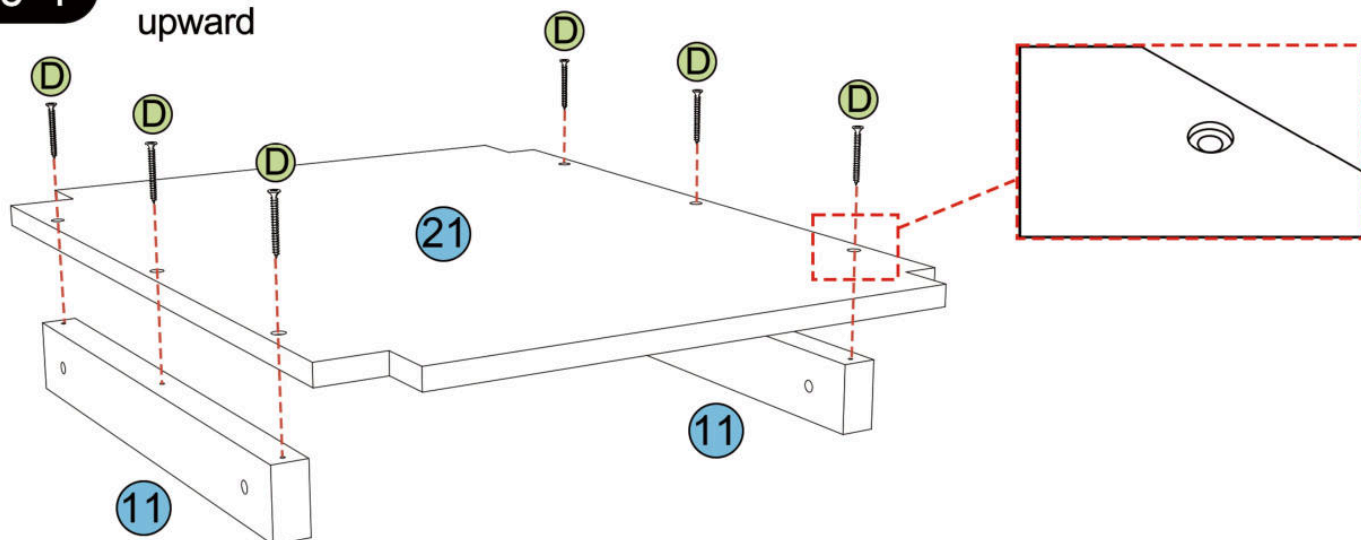


D	 M4x40	6
J	 4mm	1

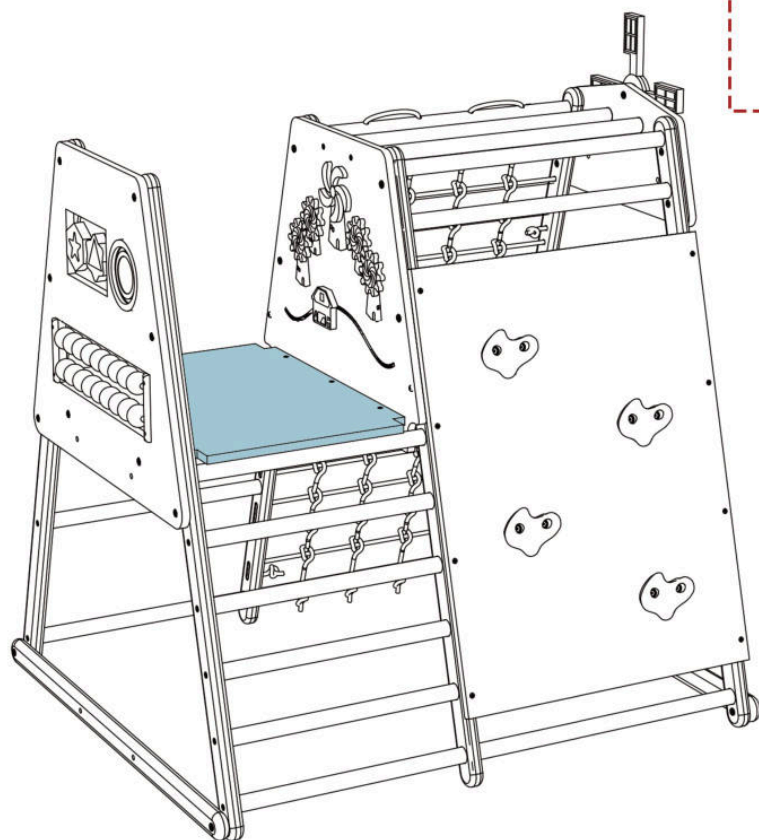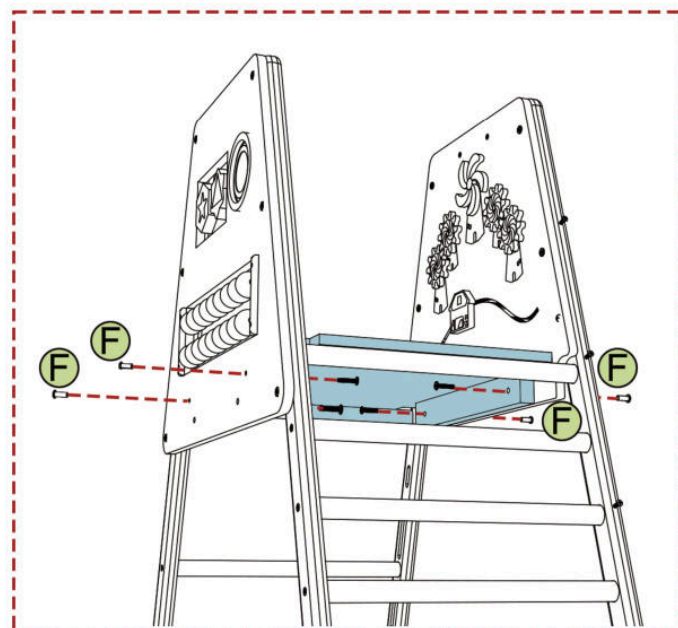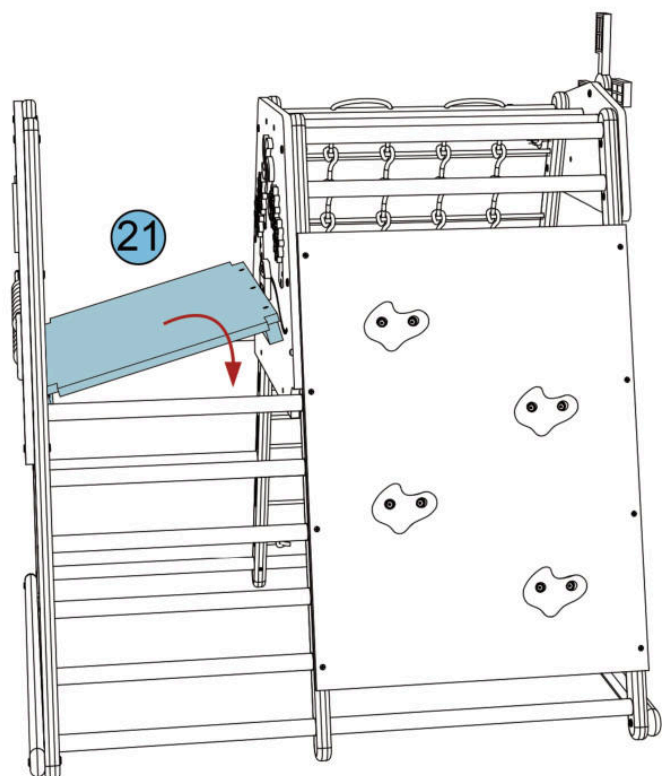


F		4
	M6x30 M6x20	
J		2
	4mm	

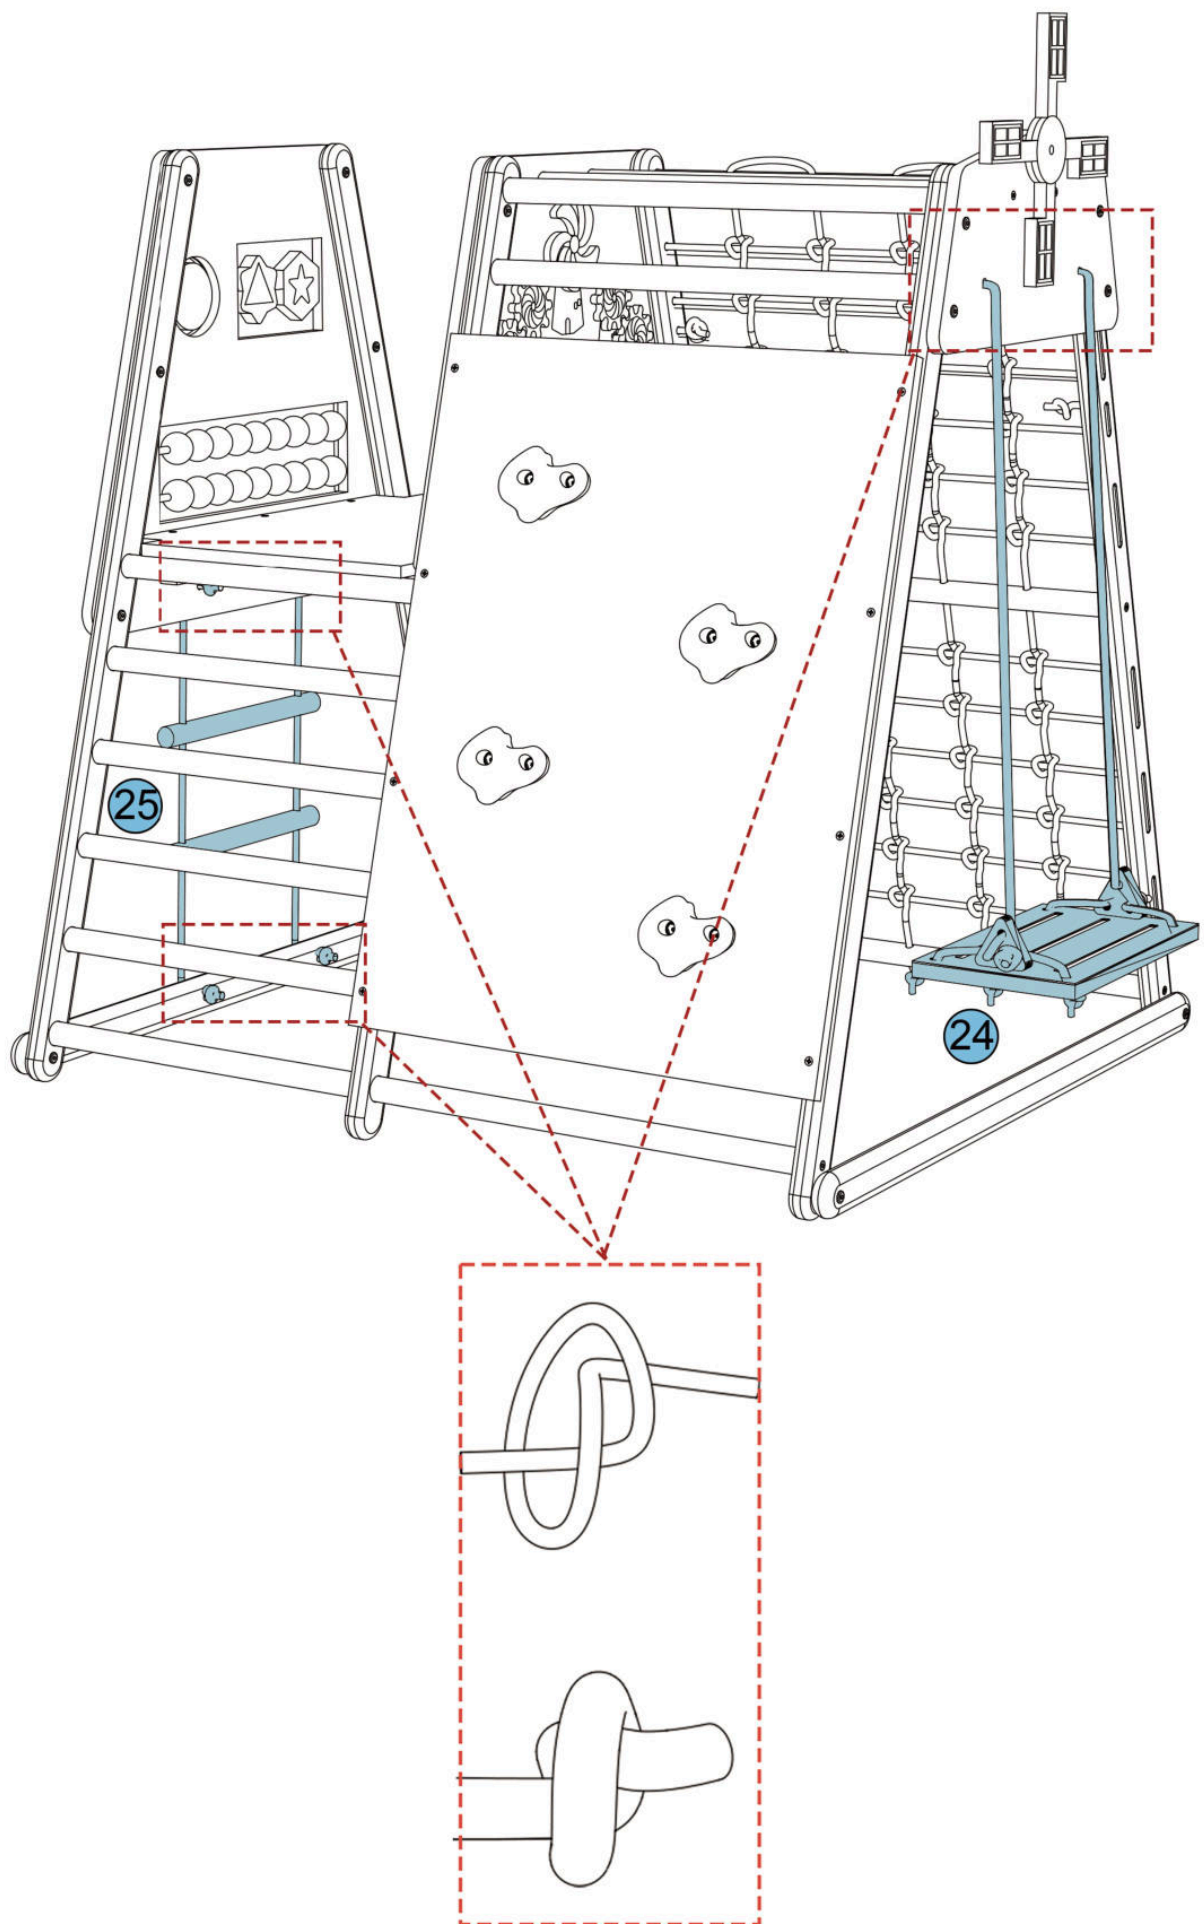


13-1

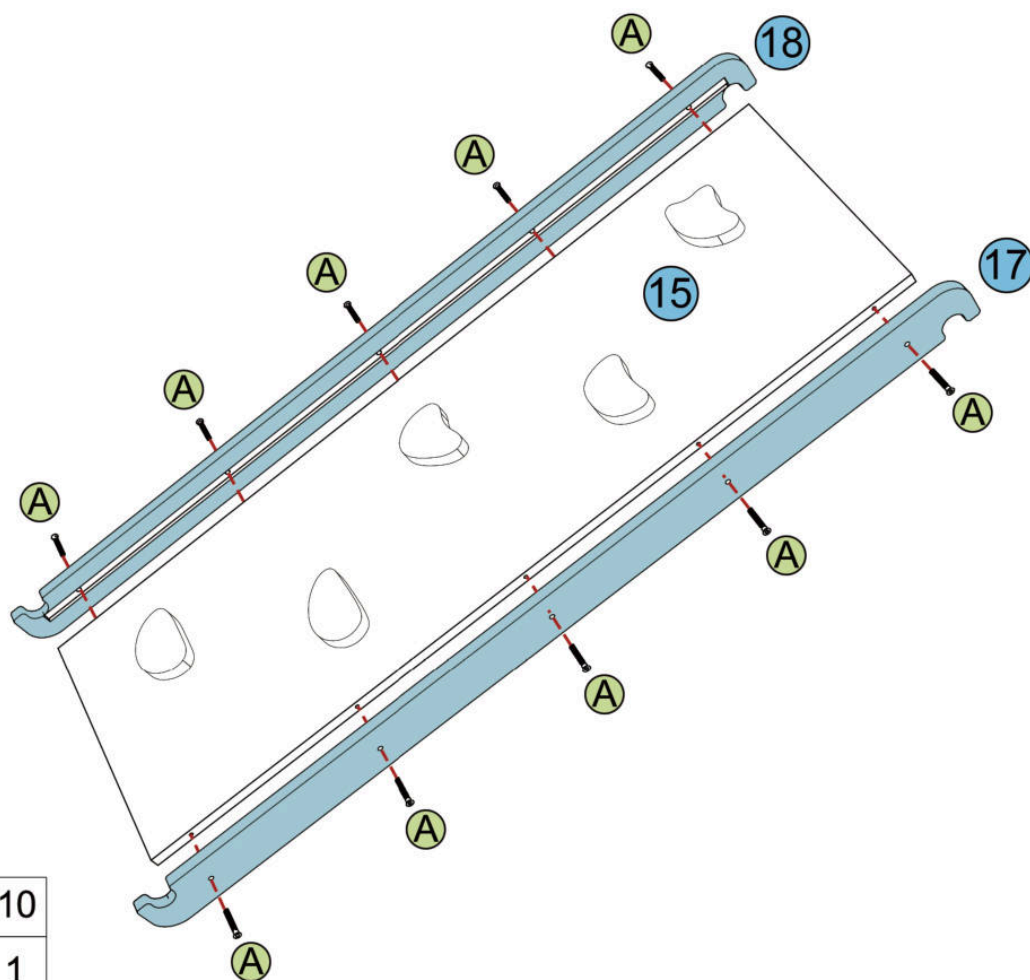

13-2

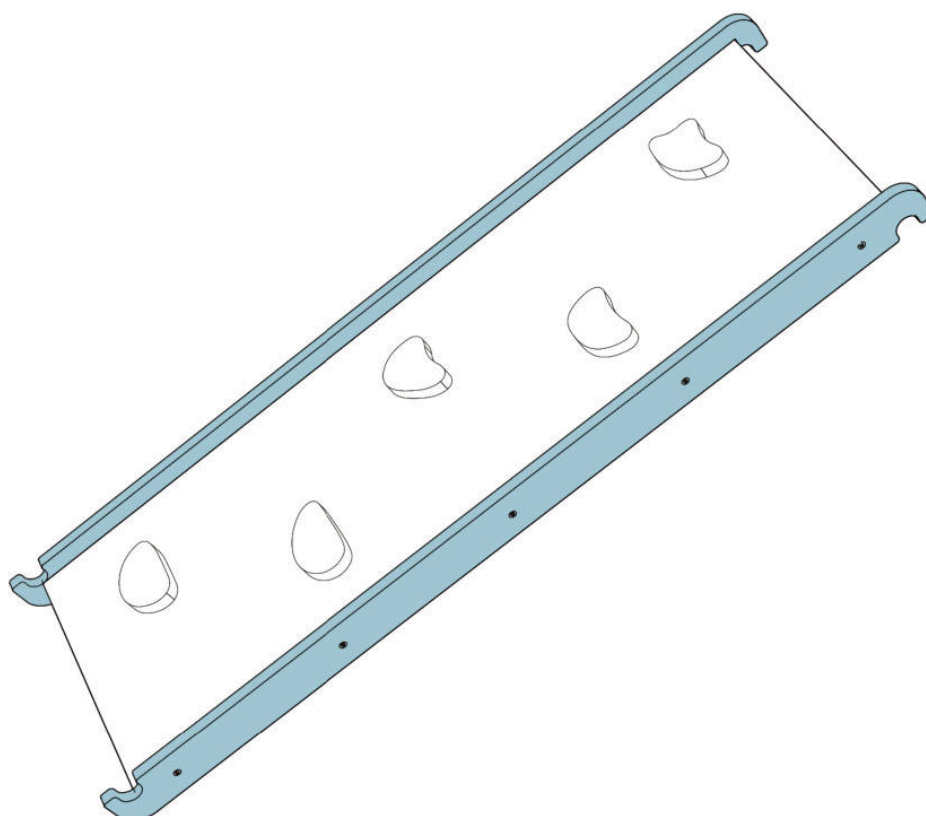

14-1

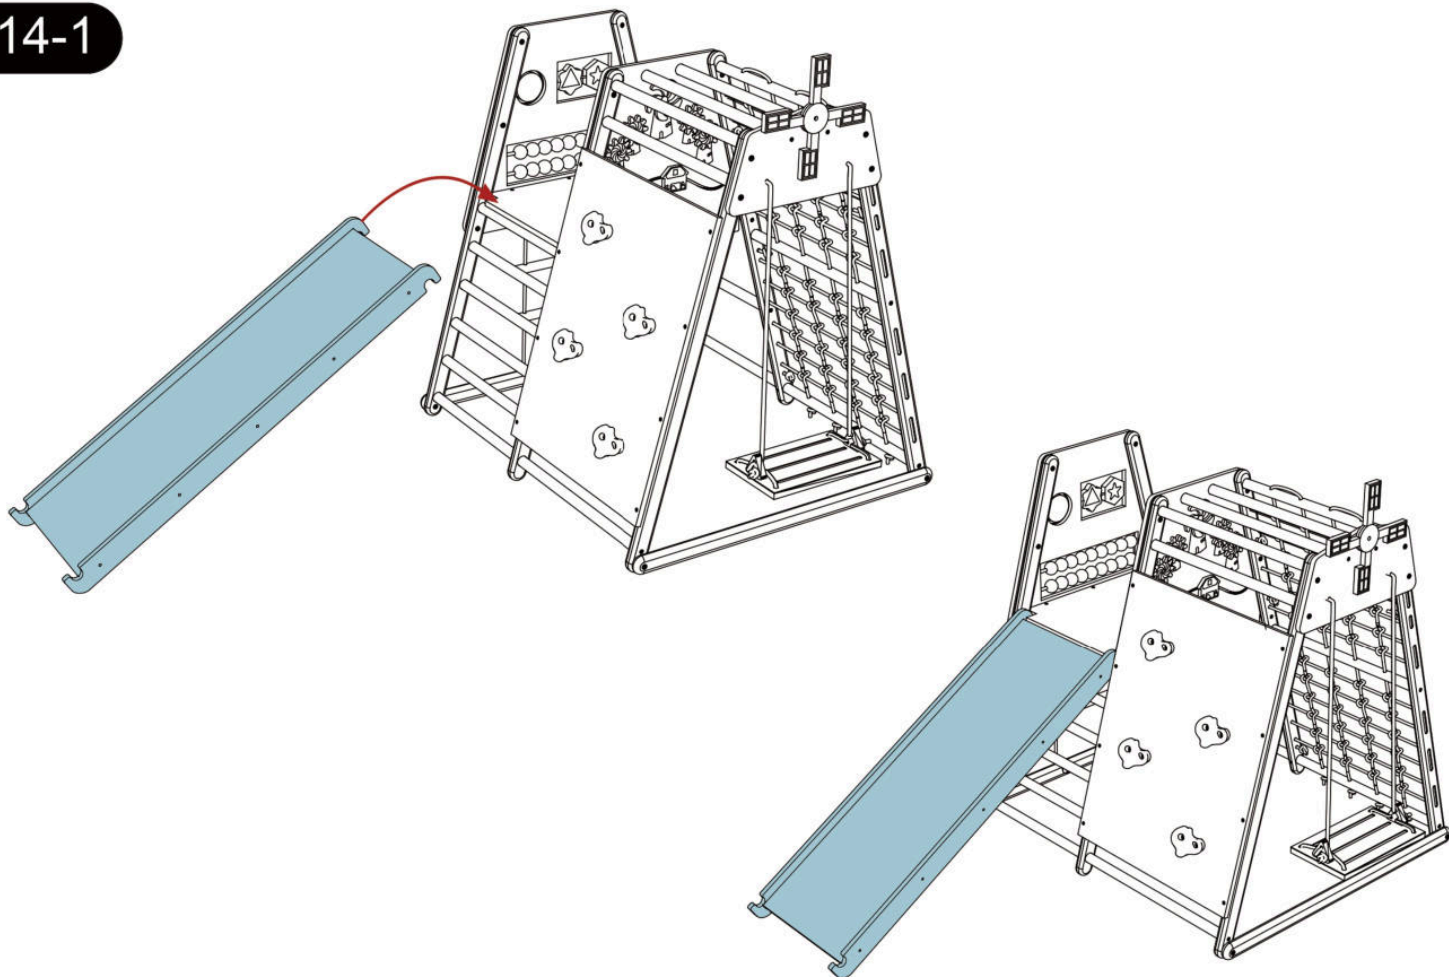

14-2

